


CHEVY / SILVERADO - GMC/SIERRA 3 Dr. PICKUP EXTENDED CAB '99-'00

CHECK IF...

1 Set Side Bars	1 Set Mounting brackets.
4 Pc. 1/2" x 1 1/2" Hex. Bolts.	4 Pc. 12mm – 1.75p x 120mm.
8 Pc. 1/2" Lock washers.	8 Pc. 1/2" Flat washers.
4 Pc. 3/8" x 1" Hex. Head bolts.	4 Pc. 3/8" Hex. Nut.
4 Pc. 3/8" Flat washers.	4 Pc. 3/8" Lock washers.

INSTRUCTIONS:

- 1.- Read and understand instructions completely before beginning installation.
- 2.- Bolt mounting brackets to step bar tubes as shown below at correct location for your vehicle. (See the drawing).
- 3.- Remove the four applicable body mounting bolts from the vehicle. (These are M12-1.75mm metric bolts that require a 15mm wrench for removal). These four bolts are not reused in this installation.
- 4.- The body mounting steel washer plates and rubber cushions are reused between the body mount and the side bar mounting bracket.
- 5.- Place the auxiliary rear bracket to the frame and on the other side to the rear bracket as shown in the picture, using 3/8" x 1" bolts.
- 5.- Position the Side Bar assembly up under the body mounts. Install the M12-1.75x120mm hex head bolt, 1/2" lock washer and 1/2" flat washer up thru the hole in the mounting bracket and the body mounting washer plate and cushion as shown. Torque the M12-1.75x120mm hex bolt to 45 lb ft.
- 6.- Keep your side bar clean and waxed to prevent corrosion. Use non-abrasive automotive type wax.

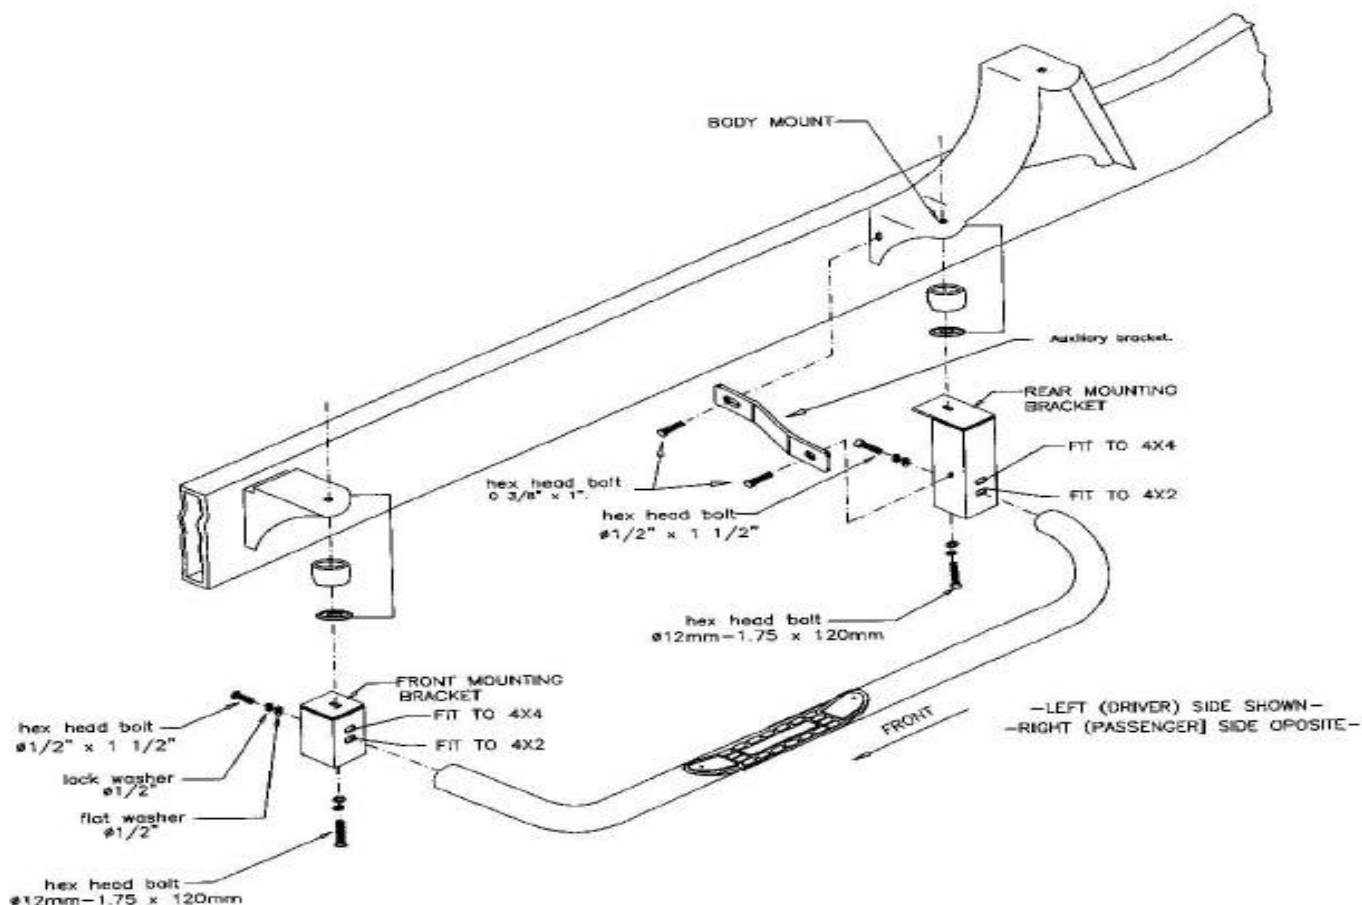

Thank you for choosing Go Industries products. For additional installation assistance, please call (800) 527-4345 or (972) 783-7444