

**Quad-Guard**  
 Installation Instructions  
**32666**  
 Dodge Ram 1500 '09 - '10  
 Except Sport




**Diagram 1**

<b>Parts List:</b>	
1 - Quad Guard	10 - 1/2" Hex Nuts
1 - Driver Bracket #46666-5	10 - 1/2" Flat Washers
1 - Passenger Bracket #46666-6	10 - 1/2" Lock Washers
2 - 1/2" x 1 1/2" Carriage Bolts	
8 - 1/2" x 1 1/4" Hex Head Bolts	


1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase. Read the instructions completely before beginning. Two people are strongly recommended for this install.

**View of Driver Bracket #46666-5**

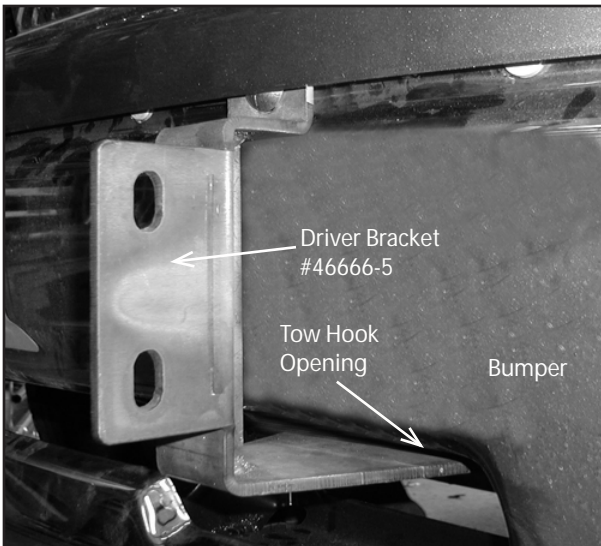

**Diagram 2**

**View of Carriage Bolt**

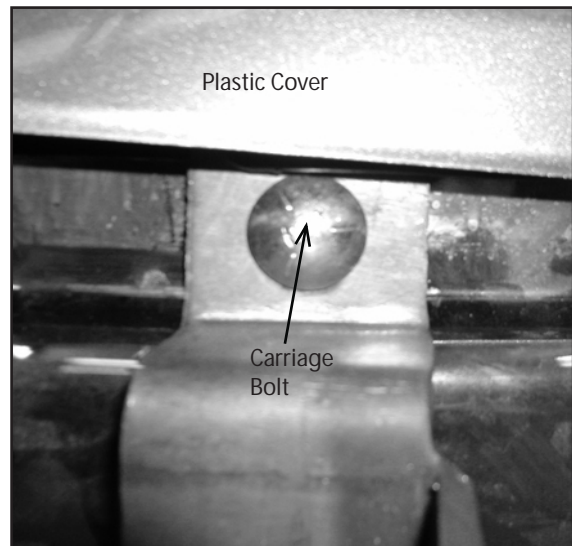

**Diagram 3**

2. **Install the driver bracket #46666-5:** Using **Diagram 2**, locate the driver bracket #46666-5. Remove the tow hook. Place driver bracket #46666-5 along with the tow hook into the tow hook opening and onto the two bolts on the frame. Using **Diagram 3**, push the driver bracket under the top plastic cover. Put a 1/2" x 1 1/2" carriage bolt into the bracket. Replace the factory nuts and bolts. Put (1) 1/2" flat washer, (1) 1/2" lock washer and (1) 1/2" hex nut on the carriage bolt behind the bumper. Hand tighten at this time. Repeat the above procedure to install the passenger top bracket #46666-6.

