

Quad - Guard
 Installation Instructions

32738

Chevy 1500, 2500 & 3500 (New Body) '07 - '10
 GMC 1500, 2500 & 3500 (New Body) '07 - '10
 Chevy Tahoe 1500 '07 - '10

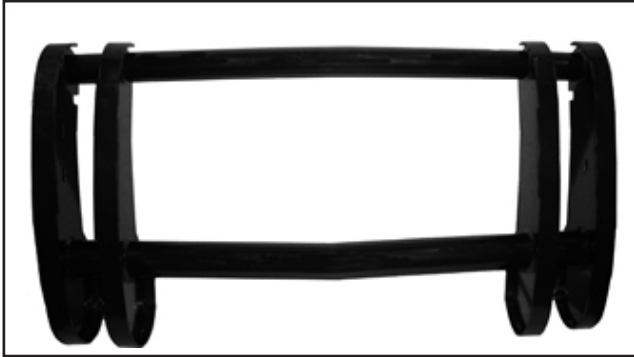


Diagram 1

Parts List:

1 - Quad - Guard	4 - 1/2" Lock Washers
2 - Brackets #32738-5	4 - 1/2 Hex Nuts
4 - 1/2" x 1 1/2" HH Bolts	8 - 1/2" Flat Washers

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase. Read the instructions completely before beginning.
2. Attach the bracket to the the inside of the frame. Use **Diagram 2** to attach the bracket to the frame. The 1500 will use the 2 bolts holding the tow hook in place. The 2500/3500 will use one of the tow hook bolts and a frame bolt to attach.
3. Attach the Quad Guard to the brackets using (1) 1/2" x 1 1/2" HH bolt with (2) 1/2" flat washers, 1/2" lock washers and (1) hex nut per bracket. Tighten all factory bolts ensuring the Quad Guard remains centered.

View of Bracket #32738-5

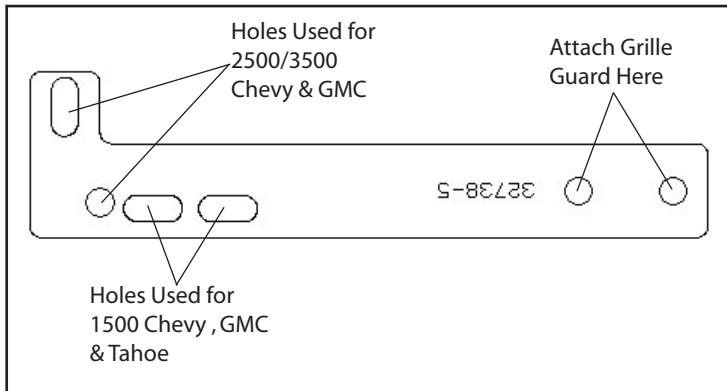


Diagram 2

View of the Front of the Vehicle



Diagram 3