

# Quad-Guard

## Installation Instructions

### **32669**

Dodge Ram 2500/3500 '10-'17



**Diagram 1**

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.


2. Remove the four bolts holding the tow hook in place as shown in **Diagram 2** and **Diagram 3**. Place the tow hook onto the driver bracket #32669-5 and replace the four factory bolts. Hand tighten at this time. Repeat the above procedure to install the passenger bracket #46669-6.

**\* If vehicle does not have tow hook, call manufacturer for additional hardware.**

3. Place the Quad Guard up to the brackets installed on the truck. Use (2) 1/2" x 1 1/2" bolts with (1) 1/2" flat washer per bolt. Place the 1/2" x 1 1/2" bolt with washer through the holes in the upright on the Quad Guard. Place (1) 1/2" flat washer, (1) 1/2" hex nut onto each of the 1/2" x 1 1/2" bolt. Hand tighten at this time.

4. Center the Grille Guard on the vehicle. Tighten the brackets to the vehicle first, then tighten all bolts on the Quad Guard ensuring that the Quad Guard remains centered on the vehicle.

### View of Driver side Bracket #32669-5

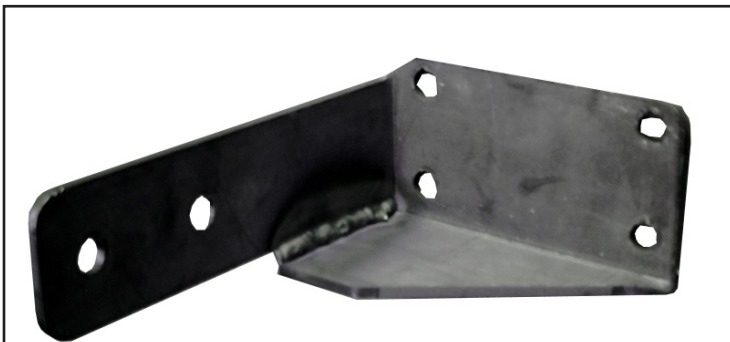

**Diagram 3**

### Parts List:

1 - Quad Guard	8 - 1/2" Flat Washers
1 - Driver bracket #32669-5	4 - Split Lock Washers
1 - Pass. Bracket #32669-6	4 - 1/2"-13 Nuts
4 - 1/2"-13 x 1 1/2" Bolts	

### View of Driver side Tow hook



**Diagram 2**

### View of Driver side Bracket #32669-5



**Diagram 4**