

Winch System Grille Guard

Installation Instructions

33610B

Nissan Pathfinder '05-'12



Diagram 1

Parts List:

2 - Uprights	4 - M12 x1.25 x 35mm Bolts
2 - Cross Tube (1.9" x 32")	4 - M12 Flat Washers
1 - 33610-7 Driver Bracket	4 - M12 Lock Washers
1 - 33610-8 Pass. Bracket	2 - 3/8" x 1 1/2" Button Head Bolts
12 - 1/2" x 1 1/2" Bolts	2- Plastic Washers
24 - 1/2" Flat Washers	
12 - 1/2" Lock Washers	*May include extra hardware.
12 - 1/2" Nuts	

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Remove lower splash shield to gain access to lower front frame rails. The splash shield will need to be trimmed after the Grille Guard is installed.
3. Locate Driver Bracket # 33610-7 at this time. On all (4) M12 x 35mm Bolts place (1) M12 lock washer and (1) M12 flat washer. Align the holes in Driver Bracket #33610-7 to the holes on the underside of frame rail and thread (1) M12 bolt with washer into each hole and hand tighten.
4. Repeat Step # 4 for Passenger side with Bracket # 33610-8.
5. Place (1) 1/2" flat washer onto (8) of the 1/2" x 1 1/2" bolts and locate the uprights for installation. Place the uprights up to the inside face of the brackets, aligning the bottom (4) holes of the uprights with the (4) holes in the bracket. On the bottom (4) upright holes insert (1) of the 1/2" x 1 1/2" bolts with washer, through the bracket and upright. On each bolt inserted, place (1) 1/2" flat washer, (1) 1/2" lock washer and (1) 1/2" nut. Hand Tighten only.
6. If installing Brush Guards on to the Winch Grille Guard, refer to the Brush Guard instructions for this step.
7. If Brush Guards are not to be installed, locate the Center Tubes. Place (1) plastic washer at each end of the center tubes and gently place the center tubes between the uprights. With the washer keeping the tube and upright from touching, insert (1) 3/8" button head bolt into the threaded tube ends and hand tighten.
8. If Installing a Winch Carrier Refer to the Carrier instructions at this time.
9. Center Grille Guard and Brush Guards on vehicle and tighten all bolts, while keeping Guard aligned.

Winch System Grille Guard

Installation Instructions

33610B

Nissan Pathfinder '05-'12

Front View of Splash shield

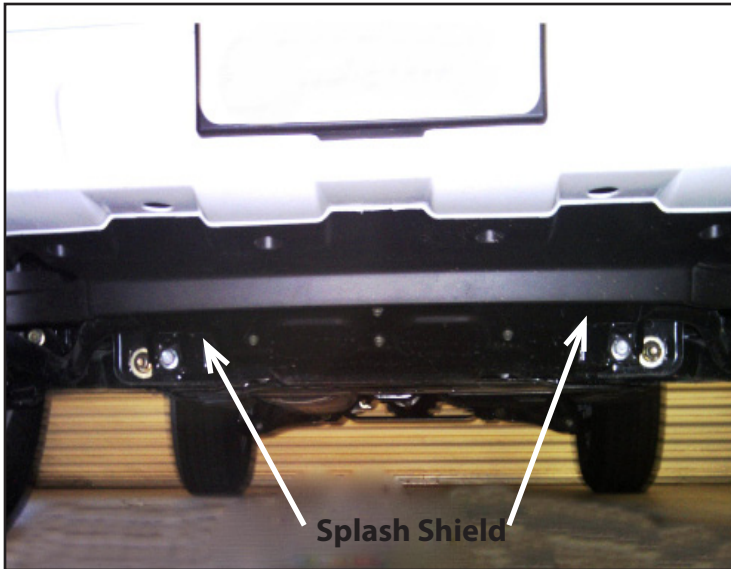


Diagram 2

**View of Driver Side
Bracket # 33610-7**

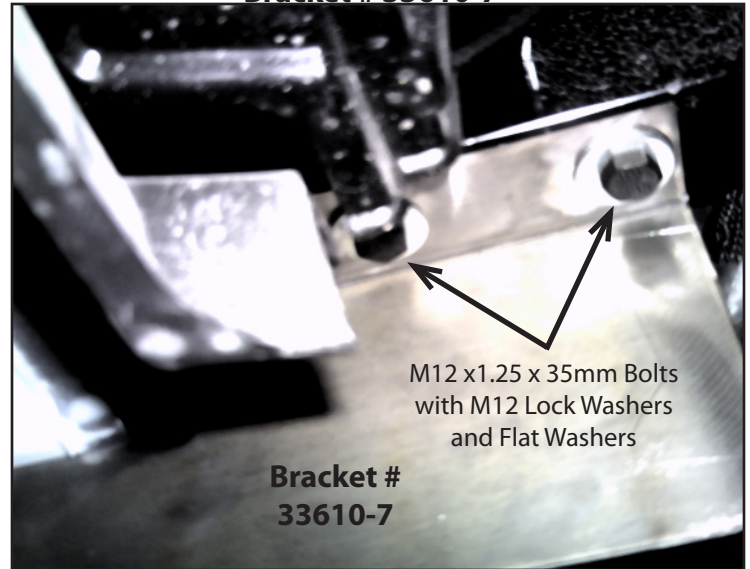


Diagram 3