



RECOVERYGEAR+

2121 Blount Road, Pompano Beach, FL 33069

Tele: (800) 886-8647 / (954) 782-0604

Fax: (954) 782-0770

Web Site: www.milemarker.com

Winch System Grille Guard

Installation Instructions

33650 / 33650B

Ford F-150 2015



Diagram 1

Parts List:

- | | |
|------------------------------------|-------------------------------------|
| 2 - Uprights #33650 | 4 - Neoprene Washers |
| 1 - Driver Bottom Bracket #33650-7 | 6 - 1/2" x 2" Bolts |
| 1 - Pass. Bottom Bracket #33650-8 | 14 - 1/2" Lock Washers |
| 1 - Driver top bracket 33650-5 | 8 - 1/2" x 2" Carriage Bolts |
| 1 - Pass. top bracket 33650-6 | 8 - 1/2" Nuts |
| 2 - 2 1/2" x 32" Cross Tubes | 14 - 1/2" Flat Washers |
| 4 - 3/8" x 1" Buttonhead Bolts | *May include extra hardware. |

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing or damaged parts. If parts are missing or damaged, contact the original place of purchase. Two people are strongly recommended for this install.
2. If vehicle comes equipped with factory tow hooks, they will have to be removed and will not be reused. The brackets are equipped with holes to be used as the tow hooks. You will remove the factory nut plates and keep them for step 4.
3. Remove plastic finish panel in the center of the factory bumper by squeezing clips from behind bumper, then pushing outward. Unplug fog lamps, if equipped, then remove rear bumper nuts. In the front, remove the two bumper nuts on each side and remove bumper. (see diagram 2)

View of Bumper on Vehicle w/out Plastic Filler



Diagram 2

Driver Side upper bracket # 33650-5

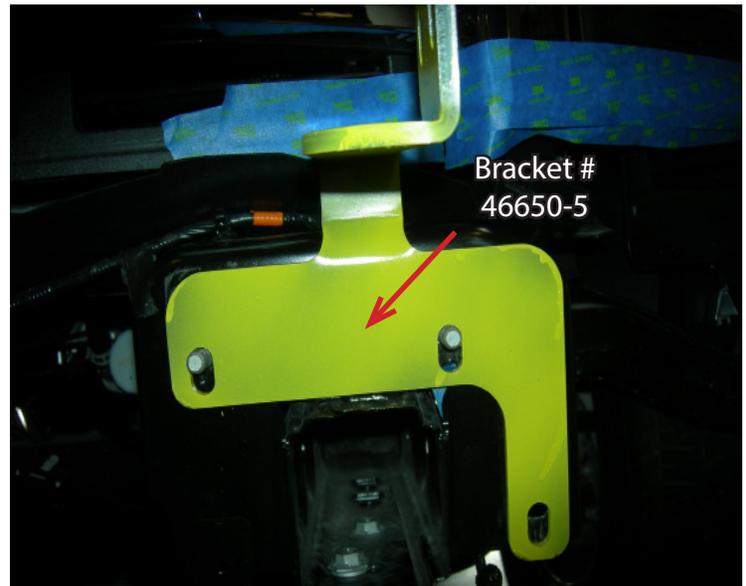


Diagram 3



RECOVERY GEAR+

2121 Blount Road, Pompano Beach, FL 33069

Tele: (800) 886-8647 / (954) 782-0604

Fax: (954) 782-0770

Web Site: www.milemarker.com

Winch System Grille Guard

Installation Instructions

33650 / 33650B

Ford F-150 2015

4. Reuse the factory nut plate in the frame and line up the 2 holes on the bottom of the frame with the holes on the nut plate. It is recommended to use tape to hold the nut plate in place because access will be limited later. Do not install lower brackets at this time. Reinstall factory upper bolt plates and hang the upper brackets #33650-5 (driver's) #33650-6 (passenger) on the bolt plate against the frame. (**see diagram-3**) Reinstall the front bumper, sandwiching the upper bracket between the frame and the bumper. Reinstall the factory bumper nuts but do not tighten at this time.
5. Install the lower brackets #33650-7 and #33650-8 to the frame where the tow hooks were removed. Thread the factory tow hook bolts through the lower brackets into the previously installed nut plate. (Hint: install the rear bolts first) (**see diagram-4 & 5**)
6. Place (1) 1/2" flat washer on to each of the (8) 1/2" x 1 1/2" bolts. Using the (8) bolts with washers attach the grille guard to the brackets with (8) 1/2" flat washers, (8) 1/2" lock washers and (8) 1/2"-13 hex nuts. Hand tighten all bolts at this time.
7. If a winch carrier is being used, install it at this time. It will install using the (2) upper Carriage bolts attaching the brackets to the uprights, shown in **Diagram 5**.
8. Install the cross tubes with (4) 3/8" x 1" buttonhead bolts and (4) neoprene washers. Place the (4) neoprene washers in between the cross tubes to protect from damage and hand tighten.
9. First, tighten the brackets to the uprights. Tighten the cross tubes second and tighten the frame bolts last making sure the Winch System Grille Guard remains centered on truck.

Underside View of Driver Bracket # 336650-7



Diagram 4

View of Driver Side Bracket # 33650-7

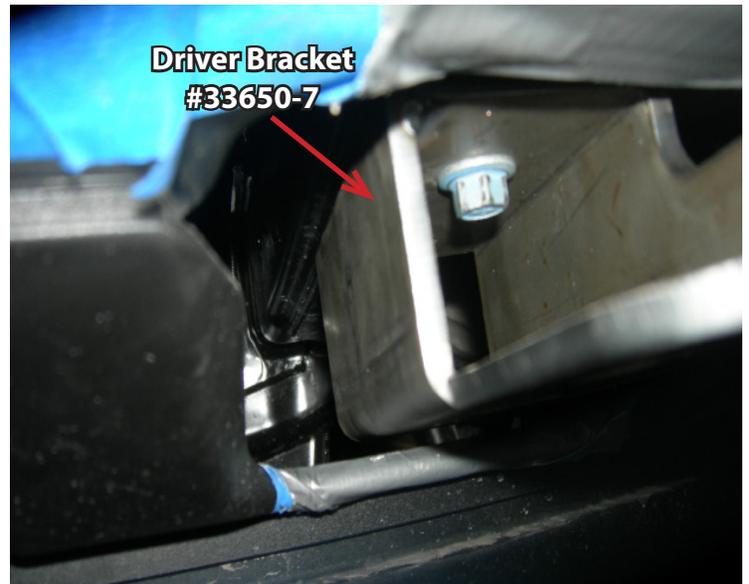


Diagram 5