

Winch System Grille Guard

Installation Instructions

33652 & 33652B

Dodge Durango '06 - '08

420 N. Grove, Richardson, TX 75081
 Tele: (800) 527 - 4345 Fax: (800) 442 - 5263
 Web site: www.goindustries.com
 E-mail: sales@goindustries.com



Diagram 1

Parts list:

1 - Inner Frame Bracket	10 - 1/2" x 2" HH Bolts
1 - Bottom Bracket	10 - 1/2" Hex Nuts
1 - Driver Top Brace	10 - 1/2" Lock Washers
1 - Passenger Top Brace	20 - 1/2" Flat Washers
2 - Uprights	
3 - 2 1/2" x 36" Cross Tubes	
6 - 3/8" x 1 1/2" Buttonhead Bolts	
6 - Plastic Washers	

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase. Read the instructions completely before beginning.

2. **Remove the Factory Radiator Cover and Factory Grille:** Open the hood on the truck. Using **Diagram 2 & Diagram 3**, locate the factory radiator cover. To remove the pop rivets, use a flat head screwdriver to pull up on the pop rivets. To remove the factory grill you must remove the 4 bolts that are bolted to it.

Radiator Cover Passenger

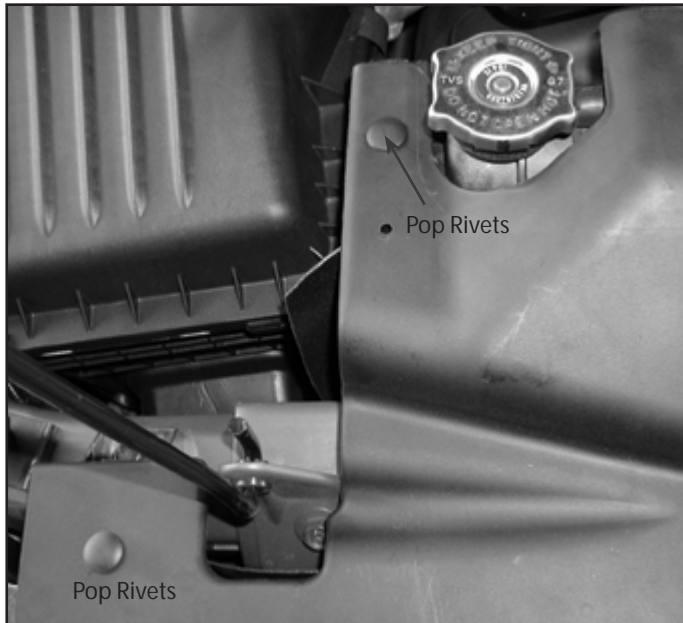


Diagram 2

Radiator Cover Driver

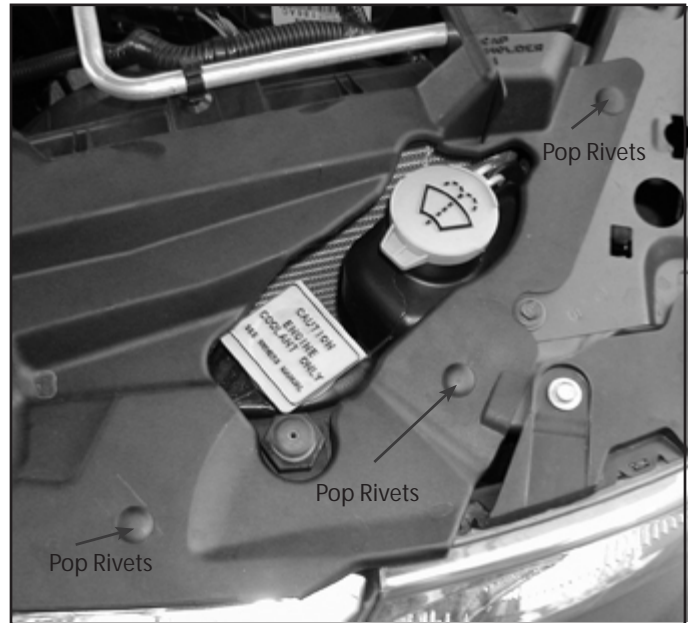


Diagram 3

420 N. Grove, Richardson, TX 75081
 Tele: (800) 527 - 4345 Fax: (800) 442 - 5263
 Web site: www.goindustries.com
 E-mail: sales@goindustries.com

3. **Install the Inner Frame Bracket:** Locate the Inner Frame Bracket, using **Diagram 4** to install at this time. Using **Diagram 5**, locate the body mount bolts and the inner frame nut. Remove the nuts and bolts, do not discard the nuts and bolts, these will be reused. Place the inner frame bracket up to the frame. The turned up end will go onto the bolts and then to the frame. Replace the factory nuts. The body mount bolts will go through the flat end of the inner frame bracket. Hand tighten nuts and bolts.

View of Frame Behind the Bumper

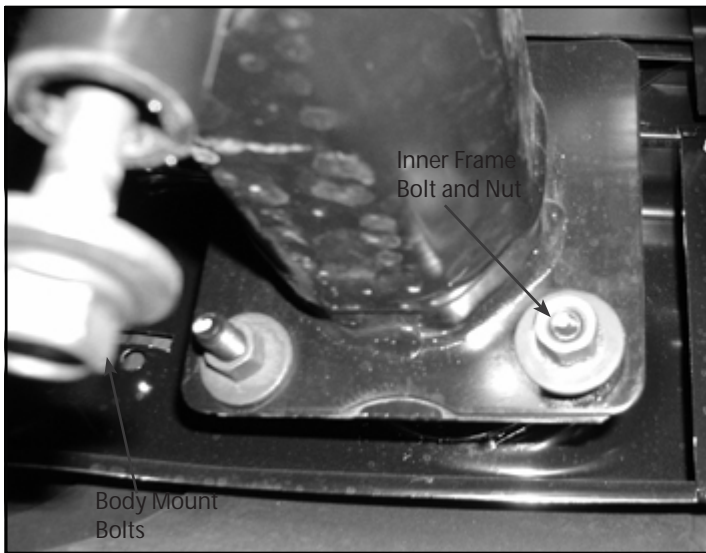


Diagram 5

Inner Frame Bracket

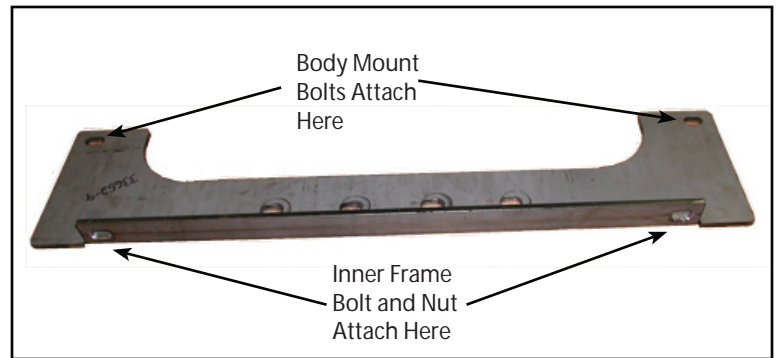


Diagram 4

4. **Attach the Bottom Bracket to the Inner Frame Bracket:** Using **Diagram 6**, place bottom bracket up to the inner frame bracket. Use (4) 1/2" x 2" HH bolts with (8) 1/2" flat washers, (4) 1/2" lock washers and (4) 1/2" hex nuts to attach bottom bracket to the inner frame bracket. Hand tighten only.

View of Bottom Bracket and Inner Frame Bracket

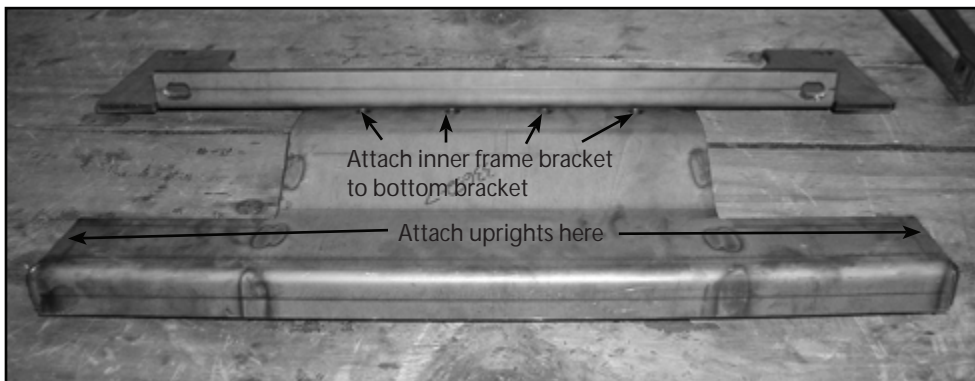


Diagram 6

