



# Police Grille Guard

## Installation Instructions

# 38004

## Chevy Impala '06 - '13

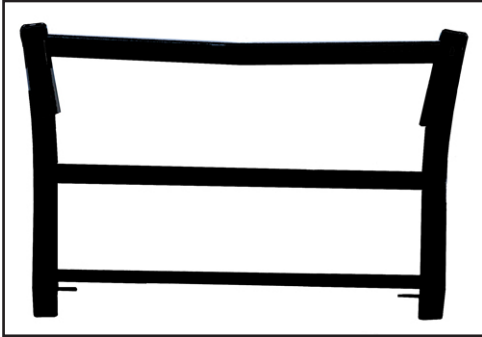


Diagram 1

Parts List:

- |                                |                            |
|--------------------------------|----------------------------|
| 1 - Police Grille Guard        | 8 - 3/8" x 1 1/4" HH Bolts |
| 1 - Driver Bracket #38004-5    | 8 - 1/2" x 1 1/2" HH Bolts |
| 1 - Passenger Bracket #38004-6 | 8 - 1/2" Lock Washers      |
| 2 - Inner Bracket #38004-7     | 8 - 1/2" Hex Nuts          |
| 8 - 3/8" Lock Nuts             | 16 - 1/2" Flat Washers     |
|                                | 16 - 3/8" Flat Washers     |

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase. Read the instructions completely before beginning.
2. Remove the radiator cover by removing the 3 twist pins. Remove the factory grilles by removing the 4 factory nuts. Set aside the radiator cover and factory grille they will be reinstalled. The factory grille will have to cut before reinstalling.



Diagram 2



Diagram 3

420 N. Grove, Richardson, TX 75081  
Tele: (800) 527 - 4345 Fax: (800) 442 - 5263  
Web site: [www.goindustries.com](http://www.goindustries.com)  
E-mail: [sales@goindustries.com](mailto:sales@goindustries.com)

3. Place driver bracket #38004-5 behind the metal bumper on vehicle as shown in Diagram 4. Place (1) inner bracket #38004-7 up to driver bracket #38004-5 as shown in Diagram 5. Use (4) 1/2" x 1 1/2" HH bolts with (4) 1/2" hex nuts, (4) 1/2" lock washers and (8) 1/2" flat washers to attach the inner bracket #38004-7 to the driver bracket #38004-5. Repeat procedure for the passenger side. After the brackets are attached place the grille guard up to the brackets center grille guard and tighten all bolts. After all bolts are tight remove the grille guard.
4. Replace the bumper cover and all grilles. the factory grille will have to be cut to reinstall.
5. Place the grille guard up to the brackets. Use (6) 1/2" x 1 1/4" with (6) 1/2" lock washers, (6) 1/2" hex nuts and (12) 1/2" flat washers. Tighten all bolts.

View of Bumper Frame with Driver Bracket  
#38004-5

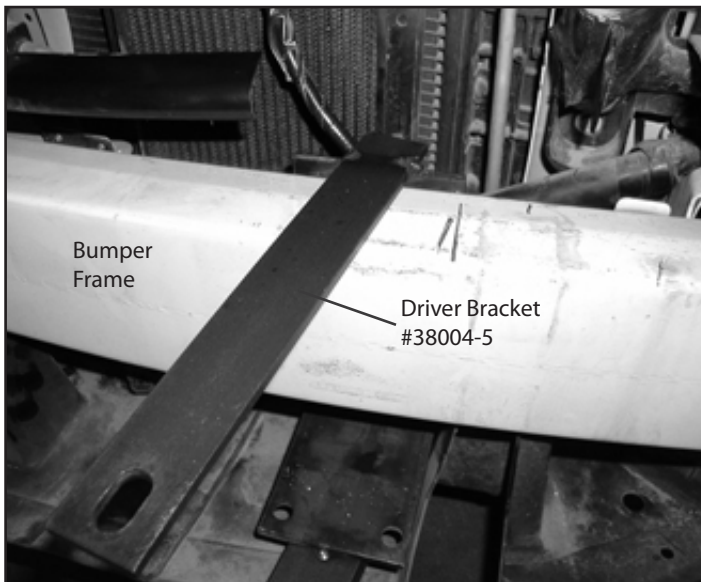


Diagram 4

View of Driver Bracket #38004-5 and Inner  
Bracket #38004-7 Attached to Bumper Frame

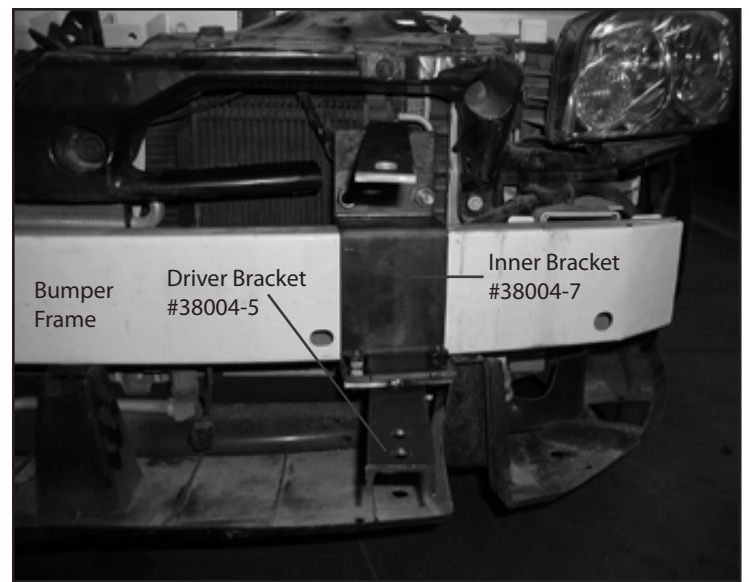


Diagram 5