

Enforcement Series Grille Guard

Installation Instructions

38009

Dodge Challenger ('06 - '11)

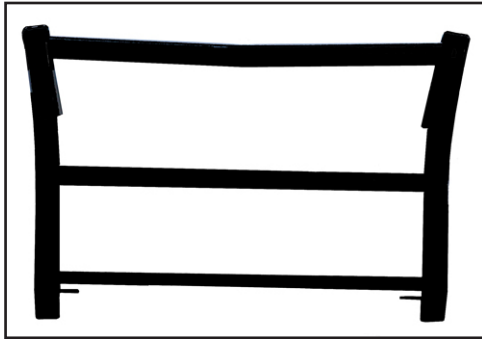


Diagram 1

Parts List:

1 - Police Grille Guard	6 - 1/2" Hex Nuts
1 - Driver Main Bracket #38009-5	6 - 1/2" Lock Washers
1 - Passenger Main Bracket #38009-6	12 - 1/2" Flat Washers
6 - 1/2" x 1 1/2" HH Bolts	6 - Plastic Rivets

Note: Completely read instructions before beginning installation

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase. Please read the instructions completely before beginning installation.

2. **Remove the bumper cover by following the steps listed below:**

- A) Remove the two piece plastic cover located above the radiator.
- B) Remove the 8 plastic push clips on top to free the upper section of the bumper cover.
- C) Remove the 3 plastic rivets on each side of the bumper in the wheel well by breaking or cutting them with a utility knife.
- D) Remove the 10 hex bolts from the bottom of the bumper.
- E) Remove the side factory bolts that attach the bumper to both sides of the fender as shown in **Diagram 3**.
- F) Remove the factory hex bolts on both sides that hold the bumper cover to the fender. To access and remove the hex nut you will need to push aside the plastic fender well guard as shown in **Diagram 4**.
- G) With the help of another person, slowly pull off the bumper cover and be careful not to damage the corner lights.

View of Top Bumper Cover



Diagram 2

View of Side Factory Bolt

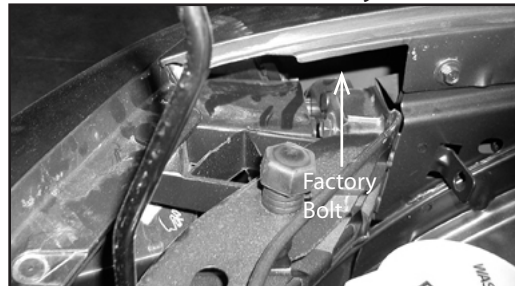


Diagram 3

View of Fender Well

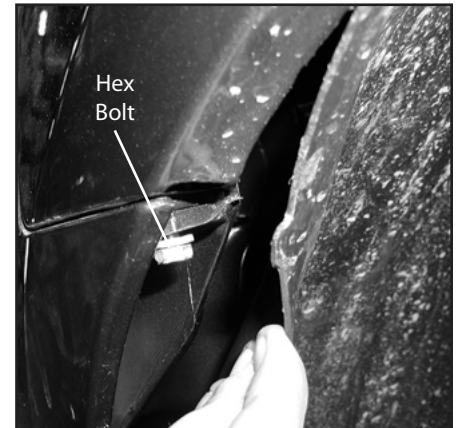


Diagram 4

Enforcement Series Grille Guard

Installation Instructions

38009

Dodge Challenger ('06 - '11)



3. Once the bumper frame is exposed, remove the (4) factory bolts that hold the bumper frame to the crash canister. Once the (4) factory bolts are removed, use a pry bar to separate the bumper frame from the crash canister just enough to slide the bracket in between the bumper frame and the crash canister. Make sure the bracket is lined up with the (4) holes on the bumper frame and replace the (4) factory bolts as shown in **Diagram 5**. Test the bumper cover to make sure it fits on the brackets, and then tighten the (4) factory bolts. **Note: On RT cars the bumper cover will have to be trimmed.** Replace the plastic inner support first then the bumper cover. Follow the steps as outlined in Step 2 on the first page of the instructions.

4. Place grille guard up to brackets and use (1) 1/2" x 1 1/2" HH Bolt, (2) 1/2" Flat Washers, (1) 1/2" Lock Washer and (1) 1/2" Hex Nut per hole in grille guard. Center grille guard on vehicle and tighten all bolts. Make sure all of the bolts and plastic rivets are reinstalled on the bumper cover.

View of Bumper Frame

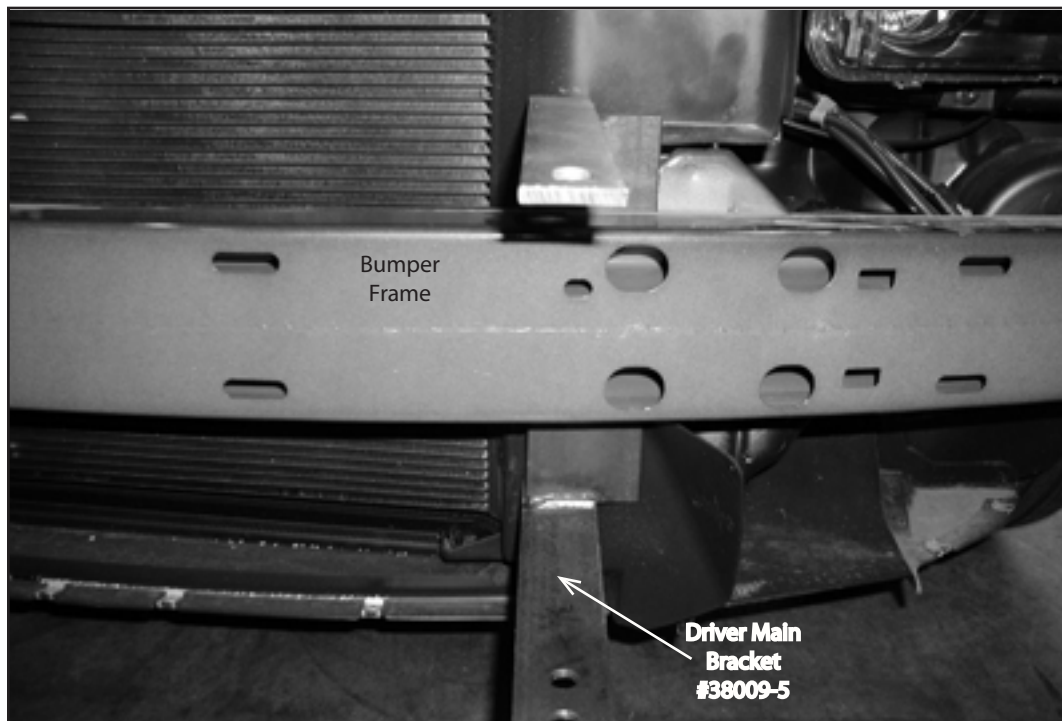


Diagram 5