


420 N. Grove, Richardson, TX 75081
 Tele: (800) 527 - 4345 Fax: (800) 442 - 5263
 Web site: www.goindustries.com
 E-mail: gosupport@goindustries.com

Enforcement Series Grille Guard

Installation Instructions

38010

Chevrolet Camaro ('09 - '11)

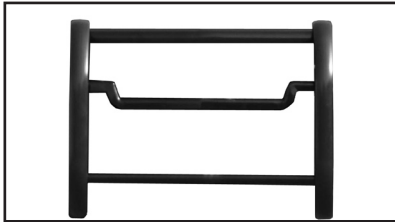

Parts List:

1- 38010 Grille Guard	6- 1/2" Nuts
1 -38010-5 Driver Bracket	6- 1/2" Split Lock washers
1- 38010-6 Passenger Bracket	12- 1/2" Flat Washers
6- 1/2"x1 1/4" Bolts	

Note: Completely read instructions before beginning installation

1. Remove the contents from the box and check for missing or damaged parts. If parts are missing or damaged, contact the original place of purchase. Two people are strongly recommended for this install.
2. Remove front bumper from vehicle and seen in **Diagram 1**.
3. Remove front bumper rear support bar (aka rebar) three bolts on passenger and driver side.
4. Place brackets between rebar and rebar frame mount as shown in **Diagram 2**. Reinstall factory bolts through rebar and brackets threading into frame mount.
5. Reinstall front bumper assembly onto vehicle. Brackets will poke through openings in bumper assembly as shown in **Diagram 3 and 4**.
6. Using the supplied hardware, attach the grill guard to brackets. Each hole will get (1) 1/2 x 1 1/4" Bolt, (2) 1/2" Flat Washers, (1) 1/2" Lock Washer, and (1) 1/2" Nut.
7. Center and level Grill Guard on vehicle and tighten all bolts at this time.

Bumper Removal



Diagram 1

Bracket #38010-5 Installed



Diagram 2

Bracket #38010-5 Installed with Bumper Installed



Diagram 3

Bracket #38010-5 Installed with Bumper Installed



Diagram 4