

Enforcement Series Grille Guard

Installation Instructions

38012 / 38912 / 40012

Chevy Caprice '11-'16

38012 / 38912

40012



Diagram 1

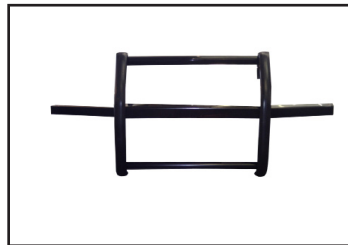


Diagram 2

Parts List:

1 - Police Grille Guard	16 - 1/2" Flat Washers
1 - Driver Bracket #38012-5	6 - 1/2" Lock Washers
1 - Pass. Bracket #38012-6	6 - 1/2" Hex Nuts
4- Nut Plates	
10 - 1/2" x 1 1/2" Bolts	* May include extra hardware

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Remove the bumper cover and plastic bumper reinforcement, shown in **Diagram #3**, from vehicle; uncovering the metal bumper (rebar).
3. Place Driver bracket #38012-5, Shown in **Diagram #4**, on the driver side rebar, shown in diagram #5. Place (1) 1/2" washer onto (2) 1/2" x 1 1/2" bolts. Place the bolts with washers through top and bottom holes in the bracket and rebar, threading the bolts into the nut plates placed inside the rebar, shown in **Diagram #6**. Repeat for Passenger side bracket #38012-6. Leave bolts loose at this time.
4. The brackets need to be centered on the car and a gap of 24" needs to be spaced out in between the top bolt holes of the brackets.
5. Tighten the (4) bolts with washer threaded into the nut plates in the rebar.
6. The brackets are designed to not reuse the plastic bumper reinforcement. If it is desired to use the plastic reinforcement severe trimming of it will be required.
7. Place the bumper cover back on the car, with the brackets exiting through the bumper cover as shown in **Diagram #7**. Reinstall all hardware holding the bumper to the car at this time. The lower bumper opening may need slight trimming for the bracket to clear, not needed on all vehicles.
8. Place the Grille Guard on the brackets aligning all (6) bolt holes. Place (1) 1/2" Flat washer onto each of the (6) 1/2" x 1 1/2" bolts. Place (1) bolt with washer through each of the (6) guard to brackets mounting holes. Place (1) 1/2" Flat washer, (1) 1/2" Lock washer and (1) 1/2" nut onto each of the (6) bolts. Tighten all hardware at this time. **Slowly and gently close hood checking for clearance with Grille Guard.** If the hood touches the guard loosen guard bolts and pull the grille guard forward, while pulling tighten the bolts. Check for hood clearance again.

View of plastic bumper reinforcement

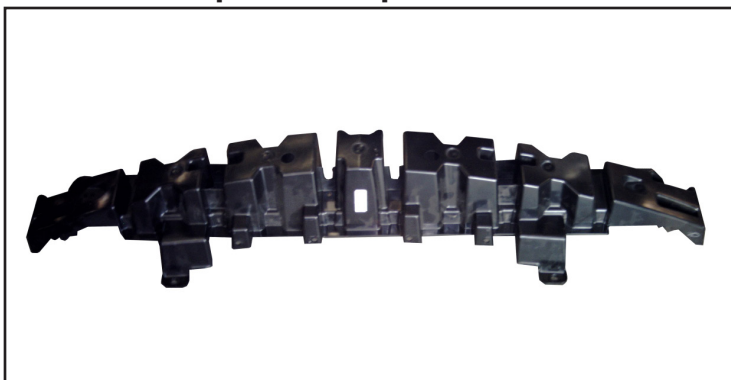


Diagram 3

Driver side bracket #38012-5



Diagram 4

Enforcement Series Grille Guard

Installation Instructions

38012 / 38912 / 40012

Chevy Caprice '11-'16

Passenger side view of nut plates

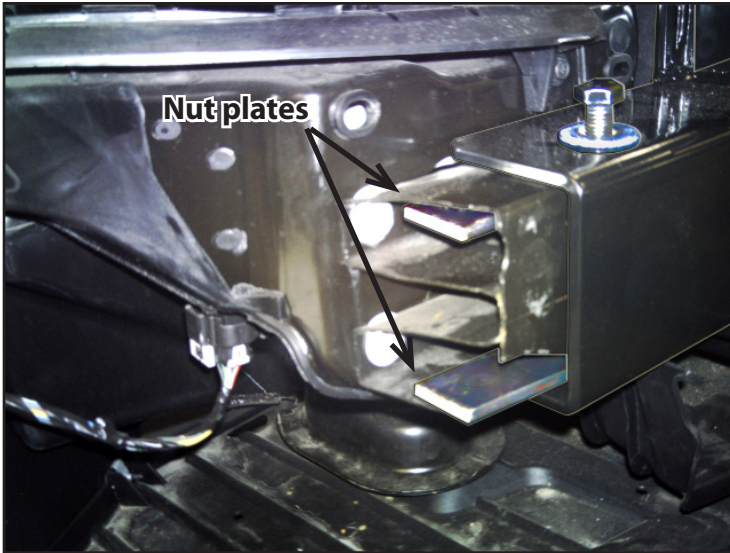


Diagram 5

Driver side view of bracket #38012-5



Diagram 6

Driver side Bracket #38012-5 with bumper installed

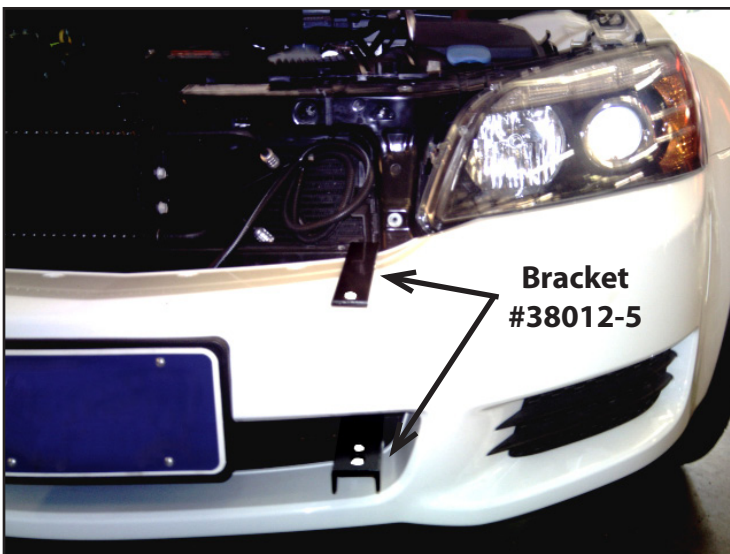


Diagram 7

Driver side Guard mounted to bracket #38012-5



Diagram 8