

Enforcement Series Grille Guard

Installation Instructions

38014 / 40014

Ford Interceptor Sedan '12- '15

38014



Diagram 1

40014

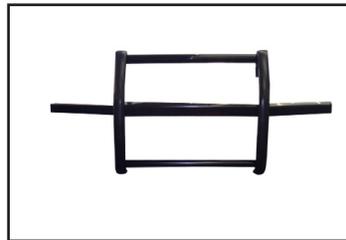


Diagram 2

Parts List:

1 - Police Grille Guard	12 - 1/2" Flat Washers
1 - Driver Bracket #38014-5	8 - 1/2" Lock Washers
1 - Pass. Bracket #38014-6	8 - 1/2" Hex Nuts
2 - Flat Strap #38015-7	3 - M6-1.0 x 30mm Bolts
3 - Small Spacers	* May include extra hardware
4 - 1/2" x 1 1/2" Bolts	
4 - 1/2" x 1 1/2" Carriage bolts	

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Remove the bumper cover and the plastic bumper reinforcement from the car. Separate the plastic reinforcement, shown in **Diagram 3**, from the bumper. It will need to be trimmed later in the install.
3. Loosen the three bolt attaching the cooler to the underside of the rebar (metal bumper structure), shown in **Diagram 4**.
4. Place driver bracket #38014-5 up to the driver side front of the rebar. Place (1) strap #38015-7 on the rear side of the rebar, and up against the back side of bracket #38014-5 aligning the two holes with the other. Place (2) 1/2" carriage bolts through the holes in the strap and then bracket and place (1) 1/2" flat washer, (1) 1/2" lock washer and (1) 1/2" nut onto each bolt. The bolt head needs to be on the strap side with the threads pointing out towards the front of the car. Leave loose at this time, as shown in **Diagram 5**.
5. Driver bracket #38014-6 and strap #38015-7 mount the same as above; except on the passenger side, the bottom carriage bolt needs to be reversed. Meaning the threads will go back towards the rear of the car. **If this is not done it can cause damage to the cooler.**
6. The brackets need to be slide to a width of 26.5" outside edge to outside edge on the top and centered on the car, as shown in **Diagram 4**.
7. With the brackets loose test fit the bumper cover at this time. The brackets will slide through the bumper cover as shown in **Diagram 6**.
8. While the bumper cover is on the vehicle the upper Driver and Passenger side Bracket bolts can be snugged through the grill of the bumper.
9. Gently remove the bumper cover from vehicle, keeping the brackets from moving.
10. Tighten all (4) bracket bolts and nuts at this time.
11. Locate the (3) spacers and install them as shown in **Diagrams 7 and 8**. The spacers are used to lower the cooler removed in step #3, for bracket clearance. Place the three spacers between the mounts on the cooler and the mounting locations on the rebar. Insert (1) M6-1.0 x 30mm Bolt into each of the three holes, and tighten down.
12. Trim the plastic reinforcement as shown in **Diagram 9** for bracket clearance.
13. Place the bumper cover back on the car, with the brackets exiting through the bumper cover as shown in **Diagram 6**. Reinstall all hardware holding the bumper to the car at this time.
14. Place the Grille Guard on the brackets aligning all (4) bolt holes. Place (1) 1/2" Flat washer onto each of the (4) 1/2" x 1 1/2" bolts. Place (1) bolt with washer through each of the (4) guard to brackets mounting holes. Place (1) 1/2" Flat washer, (1) 1/2" Lock washer and (1) 1/2" nut onto each of the (4) bolts. Tighten all hardware at this time.

Enforcement Series Grille Guard

Installation Instructions

38014 / 40014

Ford Interceptor Sedan '12- '15

View of Plastic Bumper Reinforcement



Diagram 3

Front View Showing Cooler Bolts Removed

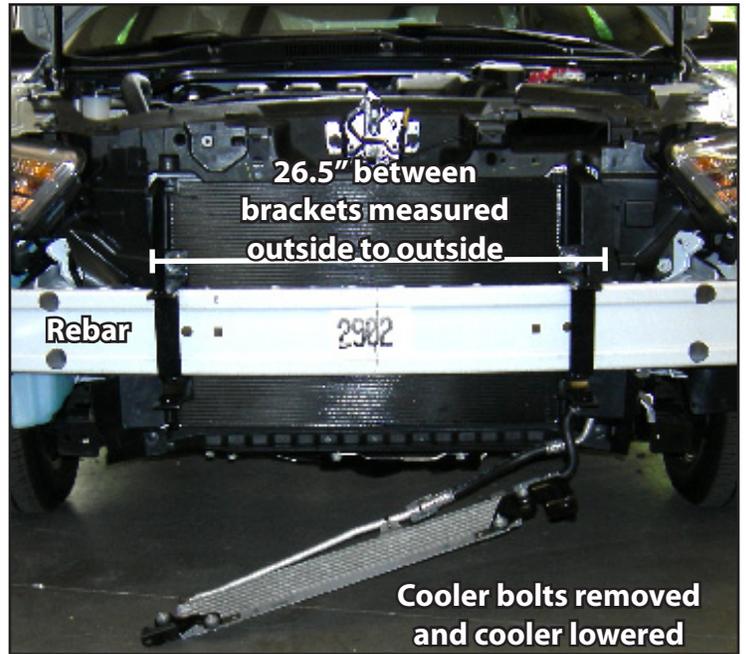


Diagram 4

Driver Side Brackets #38014-5 & #38015-7 Installed

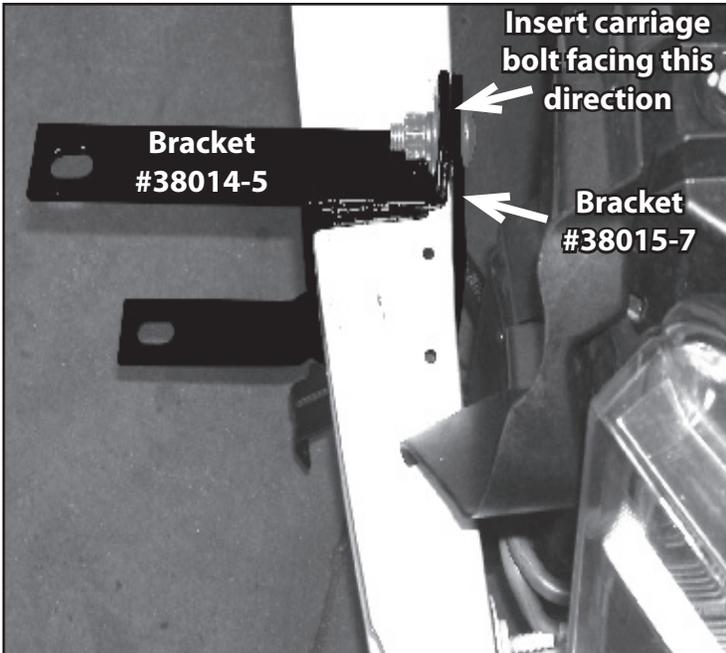


Diagram 5

Driver Side Brackets Through Bumper

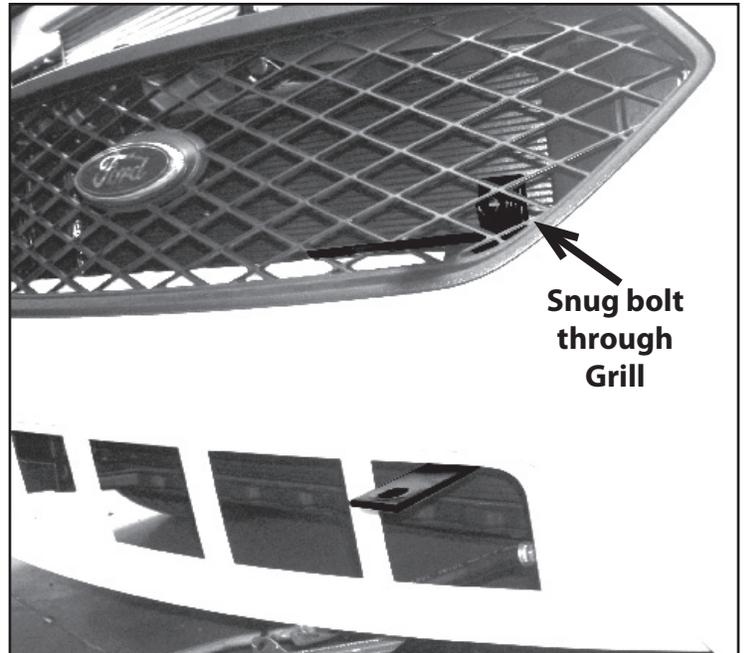


Diagram 6

Enforcement Series Grille Guard

Installation Instructions

38014 / 40014

Ford Interceptor Sedan '12-'15

Driver Side Cooler Spacers

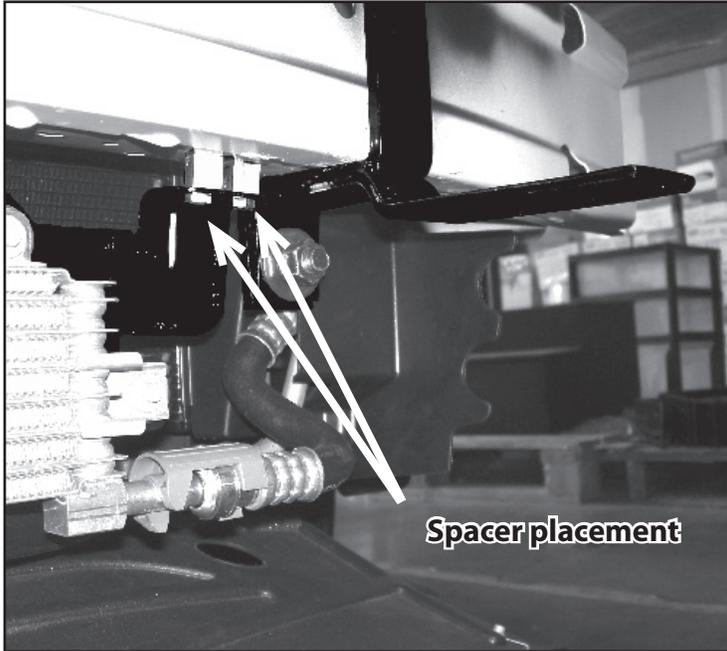


Diagram 7

Passenger Side Cooler Spacers

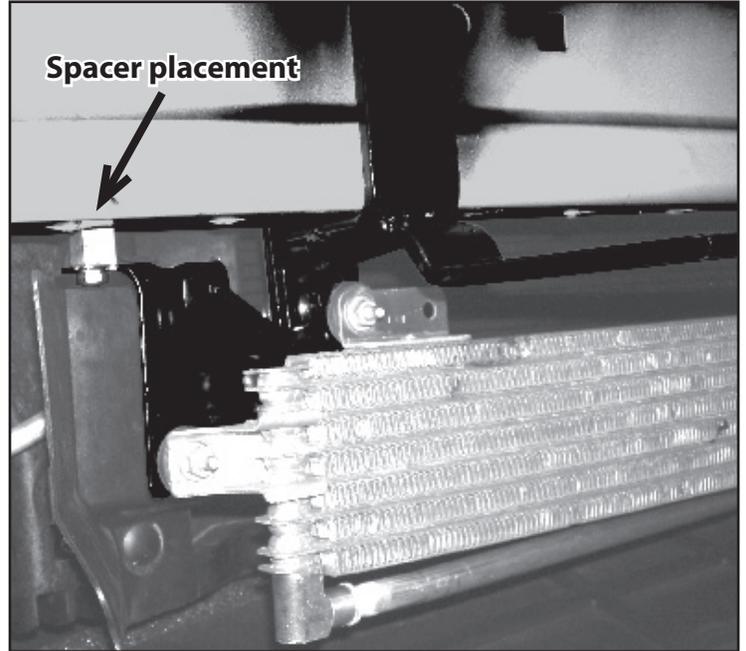


Diagram 8

Where to Trim the Plastic Reinforcement

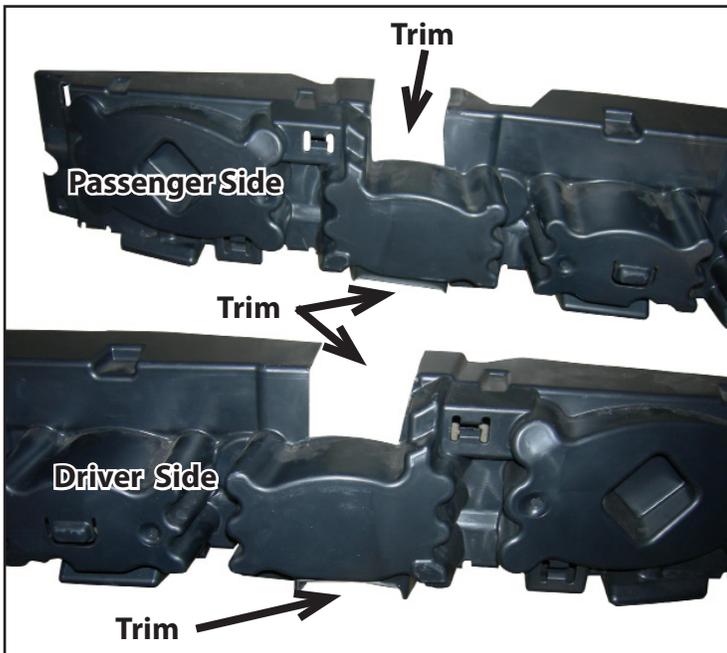


Diagram 9