

Enforcement Series Grille Guard

Installation Instructions

38015 / 39015 / 40015

Ford Interceptor Utility '12-'15

38015



Diagram 1

39015

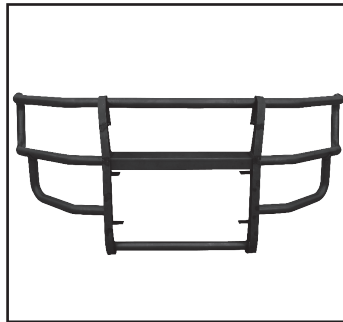


Diagram 2

40015

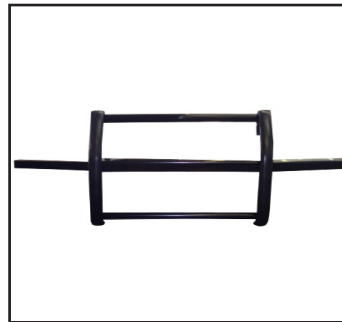


Diagram 3

Parts List:

- 1 - Grille Guard
- 2 - Main Brackets #38015-5
 (For 38015 & 40015 ONLY)
- 2 - Main Brackets #41015-5
 (For 39015 ONLY)
- 2 - Flat Straps #38015-7
- 8 - 1/2" x 1 1/2" Bolts
- 16 - 1/2" Flat Washers
- 8 - 1/2" Lock Washers
- 8 - 1/2" Nuts

* May include extra hardware

****This Unit does Require Trimming of the Plastic Bumper Cover.****

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Remove the bumper cover and plastic bumper reinforcement, shown in **Diagram #4**, from vehicle; uncovering the metal bumper ((rebar)).
3. Locate brackets #38015-5 (or 41015-5) and straps #38015-7 at this time. One of the Brackets #38015-5 (or 41015-5) needs to be placed on the rear side driver side of the rebar by bringing it up from the under side of the rebar and pivoting it into position, as shown in **Diagram #4**. Place (1) strap #38015-7 on the front side of the rebar and up against the bracket. Place (1) 1/2" washer onto (2) 1/2" x 1 1/2" bolts. Place the bolts with washer through the top and bottom holes in the bracket and strap, then place (1) 1/2" flat washer, (1) 1/2" lock washer and (1) 1/2" nut onto each bolt. Repeat for passenger side bracket #38015-5 (or 41015-5) Leave bolts loose at this time.
4. The brackets need to be centered on the car and a gap of 25" needs to be spaced out measuring the outside edges of the brackets at the furthest point out from the car.
5. The bumper cover will need some trimming in four spots. Use **Diagrams 5,6,7, and 8** for guides on the areas to trim.
6. Place the bumper cover back on the car, with the brackets exiting through the bumper cover as shown in **Diagrams #9 and 10**. Reinstall all hardware holding the bumper to the car at this time.
7. Place the Grille Guard on the brackets aligning all (4) bolt holes. Place (1) 1/2" flat washer onto each of the (4) 1/2" x 1 1/2" bolts. Place (1) bolt with washer through each of the (4) guard to brackets mounting holes. Place (1) 1/2" flat washer, (1) 1/2" lock washer and (1) 1/2" nut onto each of the (4) bolts.
8. All hardware can be tightened at this time, making sure the guard remains centered on the vehicle. The (4) bolts attaching the brackets to the rebar can and must be tightened with the bumper and grille guard .

Enforcement Series Grille Guard

Installation Instructions

38015 / 39015 / 40015

Ford Interceptor Utility '12-'15

View of Rebar with Brackets #38015-5 and Straps #38015-7 Installed

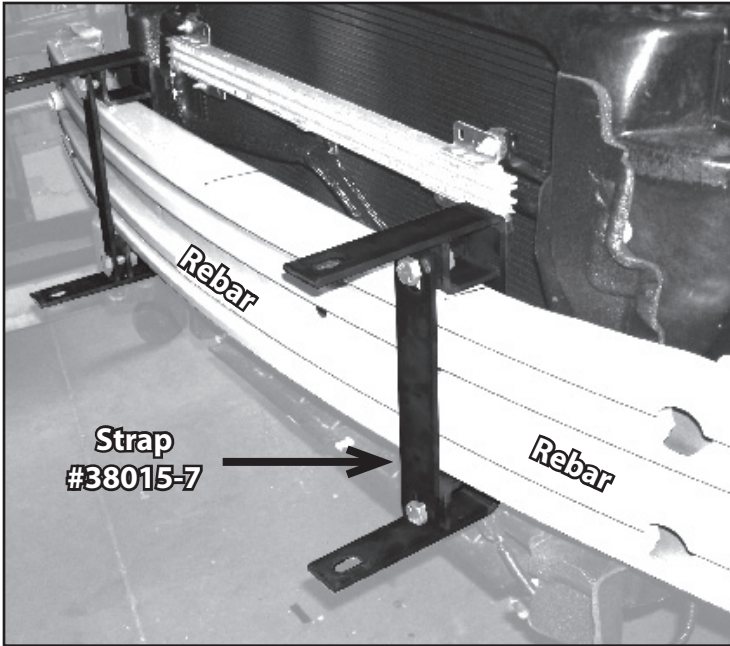


Diagram 4

Driver Side Bumper Back Side Upper View From Below of Where to Trim

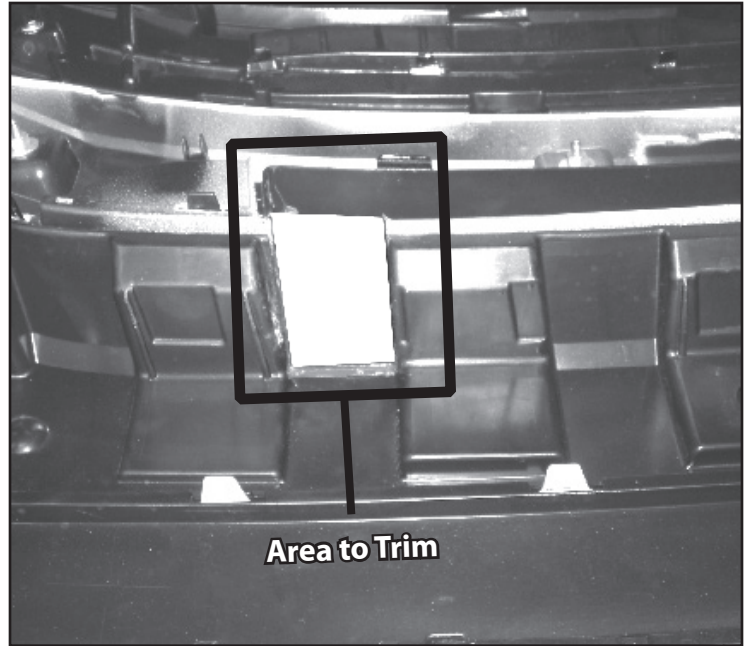


Diagram 5

Passenger Side Bumper Back Side Upper View From Below of Where to Trim

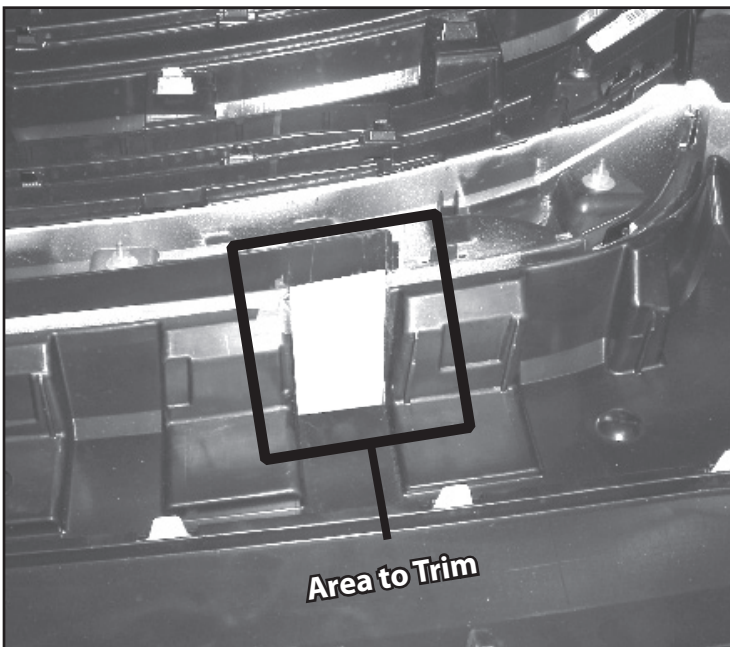


Diagram 6

Driver Side Bumper Back Side Lower View of Where to Trim

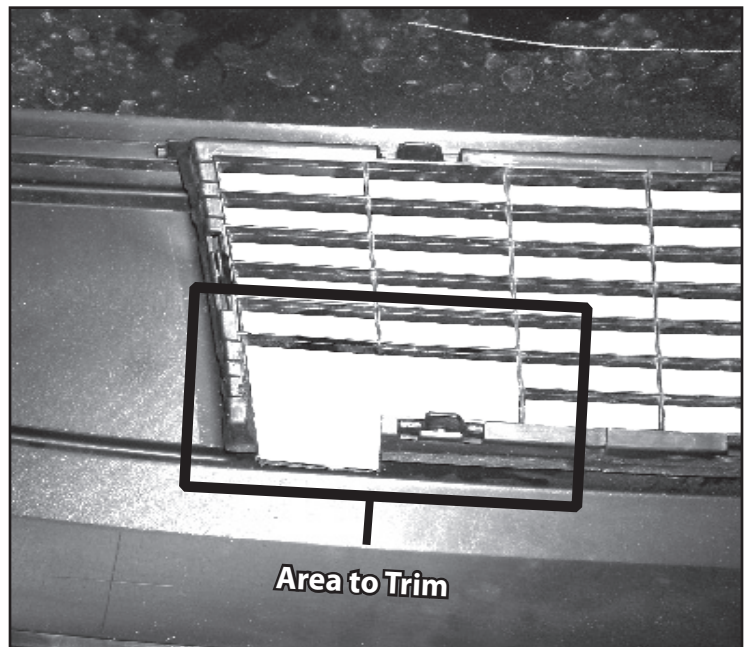


Diagram 7

Enforcement Series Grille Guard

Installation Instructions

38015 / 39015 / 40015

Ford Interceptor Utility '12-'15

**Passenger Side Bumper Back Side Lower
View of Where to Trim**

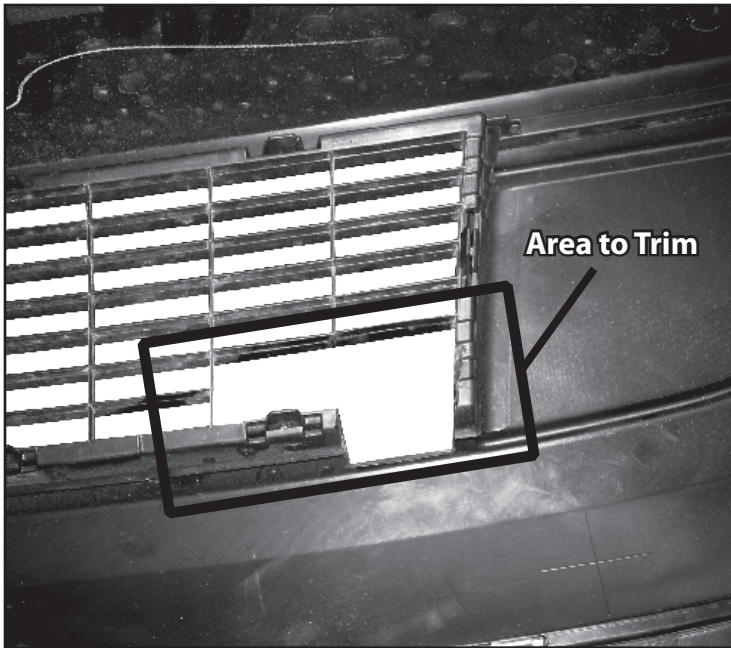


Diagram 8

**Driver Side Bracket #38015-5 and Bumper
Installed Lower View**

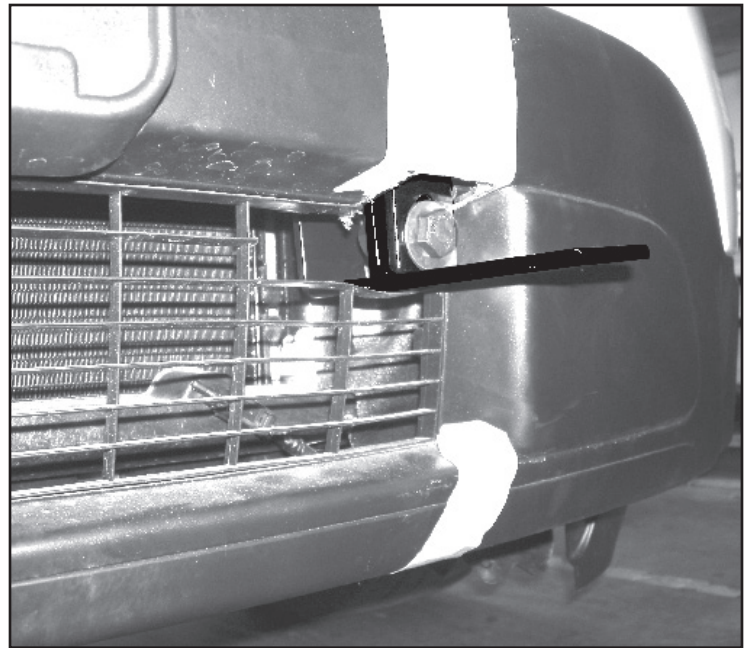


Diagram 9

**Passenger Side Bracket #38015-6 and Bumper
Installed Upper View**



Diagram 10