

Enforcement Series Grille Guard

Installation Instructions

38016 / 40016

Ford Interceptor Utility '12-'15

38016



Diagram 1

Parts List:

1 - Grille Guard	16 - 1/2" Flat Washers
2 - Rear Brackets #38016-5	8 - 1/2" Lock Washers
2 - Front Brackets #38016-7	8 - 1/2" Nuts
8 - 1/2" x 1 1/2" Bolts	

* May include extra hardware

40016



Diagram 2

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Remove the bumper cover and plastic bumper reinforcement, from vehicle; uncovering the metal bumper ((rebar)).
3. Locate brackets #38016-5 and #38016-7 at this time, shown in **Diagram #3**. Brackets #38016-5 need to be placed on the rear side driver and passenger side of the rebar by bringing it up from the under side of the rebar and pivoting them into position, as shown in **Diagrams #4 and #5**. Place (1) front bracket #38016-7 on the front side of the rebar and up against the rear bracket. The front bracket needs to be positioned with the round hole on the top and the slotted hole on the bottom. Place (1) 1/2" washer onto (2) 1/2" x 1 1/2" bolts. Place the bolts with washer through the top and bottom holes in the bracket and strap, then place (1) 1/2" flat washer, (1) 1/2" lock washer and (1) 1/2" nut onto each bolt. Leave bolts loose at this time.
4. The brackets need to be centered on the car and a gap of 25" needs to be spaced out measuring the outside edges of the brackets at the furthest point out from the center of the car. Shown in **Diagram #6**.
5. Temporarily place the bumper cover back on the car, adjusting the brackets as necessary so that the upper parts of the brackets exit through the bumper cover as shown in **Diagram #7**. The lower part of the brackets will exit through the rectangular mesh near the bottom.
6. Place the Grille Guard on the brackets aligning all (4) bolt holes, adjusting the brackets as necessary so that brackets line up with the grille guards mounting holes.
7. Carefully remove the Grille Guard and the vehicle bumper at this time, making sure as to not let the brackets move will doing so.
8. Evenly tighten the four bolts holding the brackets to the rebar.
9. Reinstall the bumper cover at this time including all hardware holding the bumper to the car at this time.
10. Place the Grille Guard on the brackets aligning all (4) bolt holes. Place (1) 1/2" flat washer onto each of the (4) 1/2" x 1 1/2" bolts. Place (1) bolt with washer through each of the (4) guard to brackets mounting holes. Place (1) 1/2" flat washer, (1) 1/2" lock washer and (1) 1/2" nut onto each of the (4) bolts.
11. All hardware can be tightened at this time, making sure the guard remains centered on the vehicle.

Enforcement Series Grille Guard

Installation Instructions

38016 / 40016

Ford Interceptor Utility '12-'15

View of Brackets #38016-5 and 38016-7

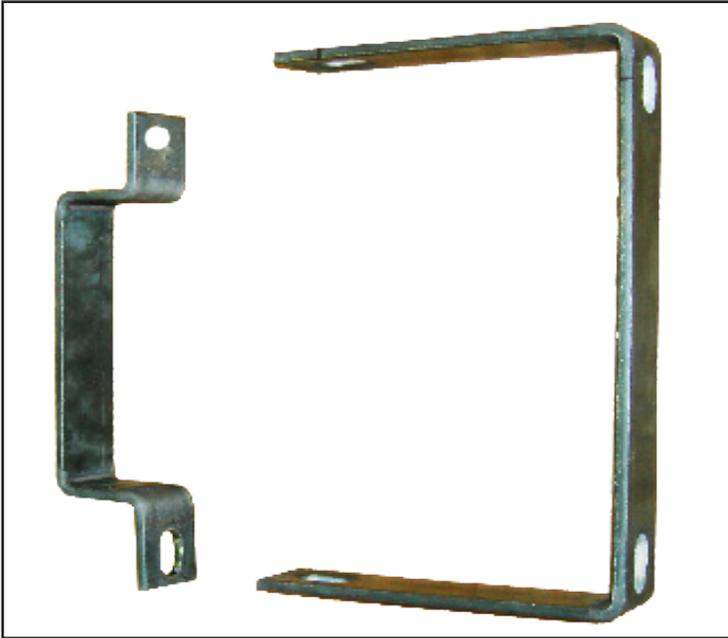


Diagram 3

Low angle view of rebar with brackets #38016-5 and #38016-7 installed



Diagram 4

View of rebar with brackets #38016-5 and #38015-7 installed



Diagram 5

Bracket width on rebar

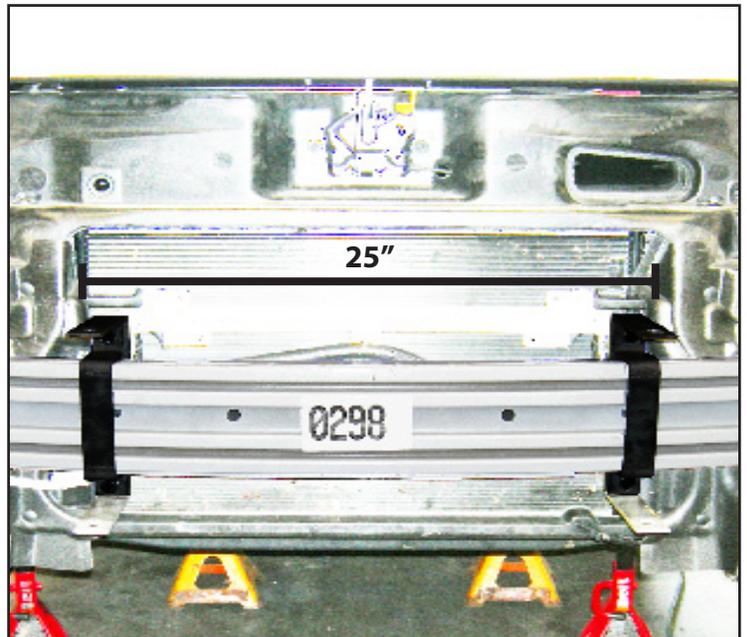


Diagram 6



420 N. Grove, Richardson, TX 75081
Tele: (800) 527 - 4345 Fax: (800) 442 - 5263
Web site: www.goindustries.com
E-mail: gosupport@goindustries.com

Enforcement Series Grille Guard

Installation Instructions

38016 / 40016

Ford Interceptor Utility '12-'15

Passenger side upper area of bracket bumper pass thru



Diagram 7