

Enforcement Series Double Trunk Tray

Installation Instructions

38212

Chevy Caprice '11-'15

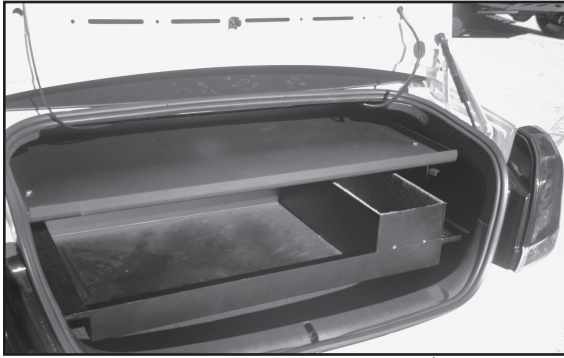


Diagram 1

Parts List:

- | | |
|----------------------------------|-------------------------------------|
| 1 - Upper Tray | 2 - Pass. Side Sliders |
| 1 - Lower Tray | 10 - 1/4" x 3/4 Carriage Bolts |
| 1 - Driver Side bracket #38312-5 | 12 - 1/4" x 3/4" Bolts |
| 1 - Pass. Side Bracket #38312-6 | 22 - 1/4" Nylon Lock Nuts |
| 1 - Top Tray #38211-1 | 4 - Screws |
| 2 - Tray Risers | |
| 2 - Driver Side Sliders | *May include extra hardware. |

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Locate Bracket #38312-5 and the Driver side sliders, shown in **Diagram 2**. Press the yellow lever to release the slider lock and pull out slider on both, place (2) 1/4" carriage bolts through the sliders as shown in **Diagram 3**. Place the sliders with bolts up to the mounting bracket #38312-5, and place the bolts through the bracket. Thread (1) 1/4" nylon lock nut onto each of the (2) bolts and tighten. Repeat for The Passenger side sliders and mounting bracket #38312-6. The position of the sliders on the brackets in up to the installed, there are multiple holes for adjustment of uses. Which ever holes are used need to be the same for driver and passenger side.
3. Remove the carpeted spare tire cover panel from the from of vehicle and set to the side, it will need to be trimmed before reinstallation.
4. Place (1) 1/4" carriage bolt onto the top most hole on the driver side bracket #38312-5 with slider, place (1) 1/4" nylon lock nut onto the bolt and leave loose. Slide the (1) 1/4" carriage bolt head, with the bracket and slider attached through the opening in the rear deck panel. Pull to the rear to so the head catches on the rear deck panel, as shown in **Diagram 4**. Repeat for passenger side bracket #38312-6 and slider.
5. Position the bottoms of the brackets as shown in **Diagram 5**. The driver and passenger brackets must be positioned squarely with the other and spaced with **a gap of 40 1/2"** between. Once brackets are squared up use (2) sheet metal screws to attach the bracket to the trunk floor. Tighten the top mounting carriage bolt at this time.

View of Driver and Passenger Sliders

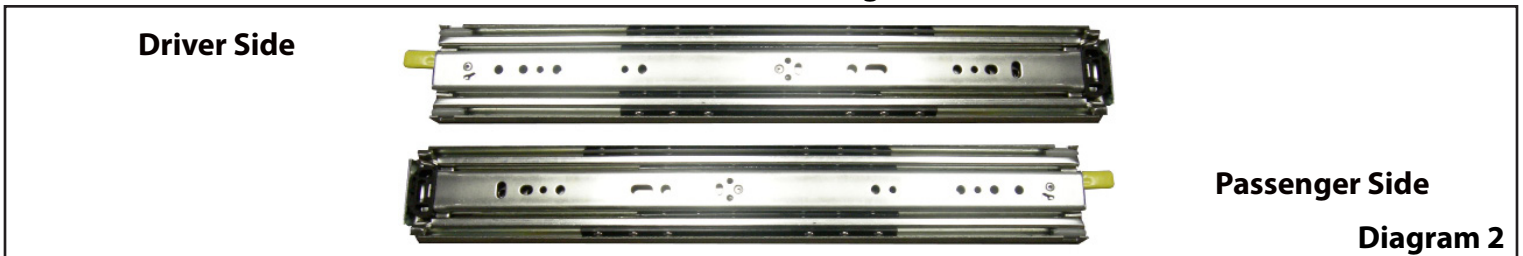


Diagram 2

View showing bolt placement in Slider

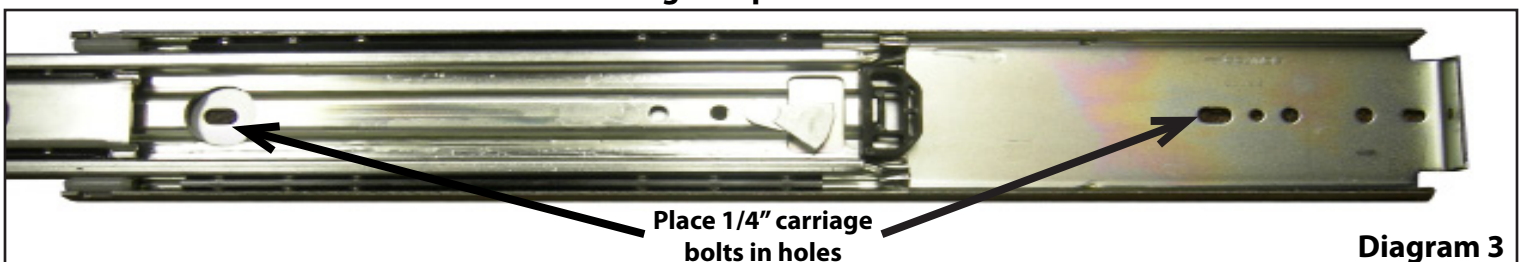


Diagram 3

Enforcement Series Double Trunk Tray

Installation Instructions

38212

Chevy Caprice '11-'15

6. Unlatch and slide out the driver side upper slider and locate the side riser plates at this time. The side riser plates have multiple mounting height positions, to work with different needs. Using (2) 1/4" bolts placed through the slider attach the riser to the slider with (2) 1/4" nuts as shown in **Diagram 6**. Repeat for the passenger side upper riser.

7. Place the upper tray on top of the slider, and place (1) 1/4" bolt through each of the four holes in the top face, and into the risers. Place (1) 1/4" nylon lock nut onto each nut at this time and tighten all hardware.

8. Unlatch and slide out the driver and passenger side upper sliders. Place the lower tray in between the driver and passenger lower sliders, and place (1) 1/4" bolt through the sliders first and entering the lower tray. Place (1) 1/4" nylon lock nut onto each nut at this time and tighten all hardware.

9. The carpeted tire cover panel will need to be trimmed at this point. Trim carpet as show in **Diagram 7**. Reinstall the carpet at this time.

Top View of Driver Bracket #38312-5



Diagram 4

Bottom View of Driver Bracket #38312-5

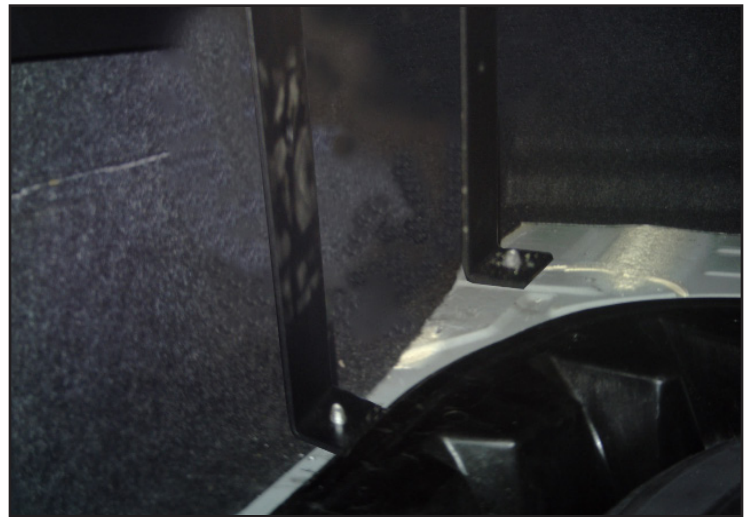


Diagram 5

Driver Side with Slides and Bracket mounted



Diagram 6

Driver Side View of Rear Carpet area to Trim

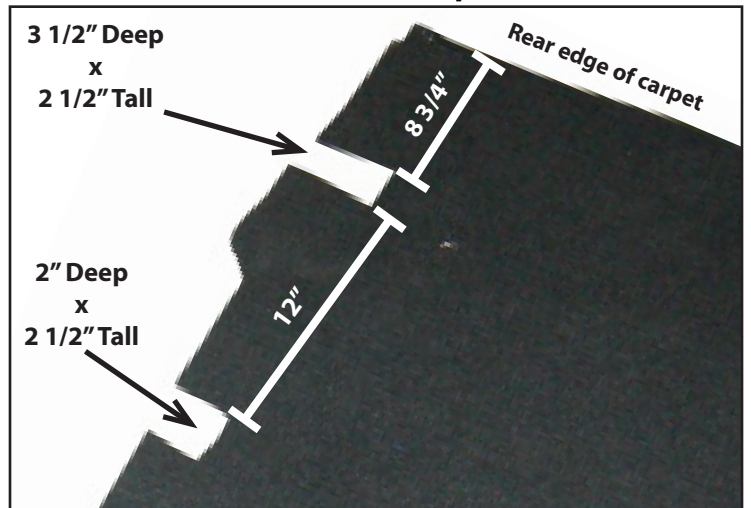


Diagram 7