

# Enforcement Series Trunk Tray

Installation Instructions

## 38311

Dodge Charger '11-'12

### Parts List:


- |                            |                         |
|----------------------------|-------------------------|
| 1- Top Trunk Tray #38211-1 | 1- Driver Side Assembly |
| 1- #38205 Bolt Kit         | 1- Pass Side Assembly   |

\*May include extra Hardware

### Note: Completely read instructions before beginning installation!


1. Remove all contents from box and check for missing pieces or damage. If parts are missing or damaged, stop installation and contact the original place of purchase immediately.
2. Carpet in trunk will need to be cut or fully removed to mount Driver and Passenger assemblies to strut towers. Cut carpet around upper strut mounts following the dotted lines in **Diagram 1**.  
 2. The white dotted line will allow for a cleaner install, while the black dotted line is for a quick install.
3. Install Driver and Passenger assemblies to upper strut mount bolts as shown in **Diagram 3**, using supplied washers and nylon lock nuts.
4. Level sliders with screws inserted into the front end of the slides, running the screws into the rear seat brace edge of vehicle.
5. The large carpeted folding floor cover will need to be trimmed, referring to **Diagram 4**.
6. Install the upper trunk tray to the sliders by attaching the tray with supplied hardware. The large break must go towards the rear of the car to install correctly as shown in **Diagram 6**.
7. All trays and mounts have slotted holes and multiple locations to make adjustments to fit different needs.

### 38311 Installation Complete

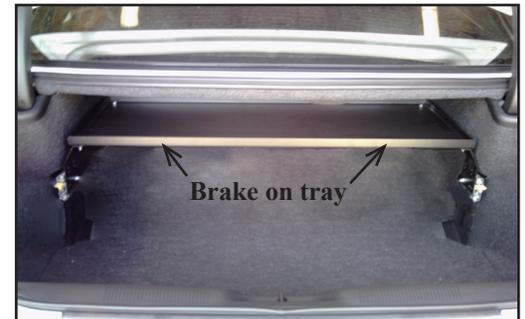

**Diagram 1**

### Passenger side Carpet area to trim

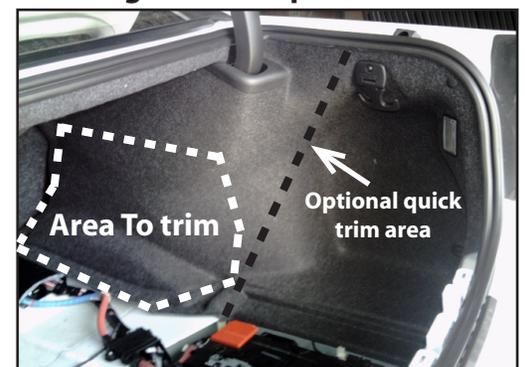


**Diagram 2**

### Driver Assembly Attachment



**Diagram 3**

### Area of folding floor cover to trim

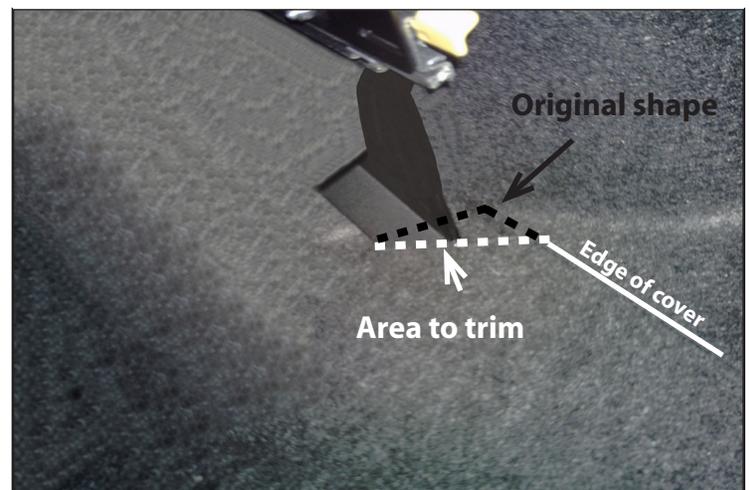

**Diagram 4**