

# Enforcement Series Trunk Tray

Installation Instructions

## 38312

Chevy Caprice '11-'15



**Diagram 1**

**Parts List:**


- |                                 |                                |
|---------------------------------|--------------------------------|
| 1- Tray                         | 1- Pass. Side Slider           |
| 1- Driver Side bracket #38312-5 | 10 - 1/4" x 3/4 Carriage Bolts |
| 1- Pass. Side Bracket #38312-6  | 12- 1/4" x 3/4" Bolts          |
| 1- Top Tray #38211-1            | 22- 1/4" Nylon Lock Nuts       |
| 2- Tray Risers                  | 4- Tech Screws                 |
| 1- Driver side Slider           |                                |

**\*May include extra hardware.**

**Note: Completely read instructions before beginning installation!**


1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Locate Bracket #38312-5 and the Driver side slider, shown in **Diagram 2**. Press the yellow lever to release the slider lock and pull out slider, place (2) 1/4" carriage bolts through the slider as shown in **Diagram 3**. Place the slider with bolts up to the mounting bracket #38312-5, and place the bolts through the bracket. Thread (1) 1/4" nylon lock nut onto each of the (2) bolts and tighten. Repeat for The Passenger side slider and mounting bracket #38312-6.
3. Remove the carpeted spare tire cover panel from the front of vehicle and set to the side, it will need to be trimmed before reinstallation.
4. Place (1) 1/4" carriage bolt onto the top most hole on the driver side bracket #38312-5 with slider, place (1) 1/4" nylon lock nut onto the bolt and leave loose. Slide the (1) 1/4" carriage bolt head, with the bracket and slider attached through the opening in the rear deck panel. Pull to the rear to so the head catches on the rear deck panel, as shown in **Diagram 4**. Repeat for passenger side bracket #38312-6 and slider.

**View of Driver and Passenger Sliders**

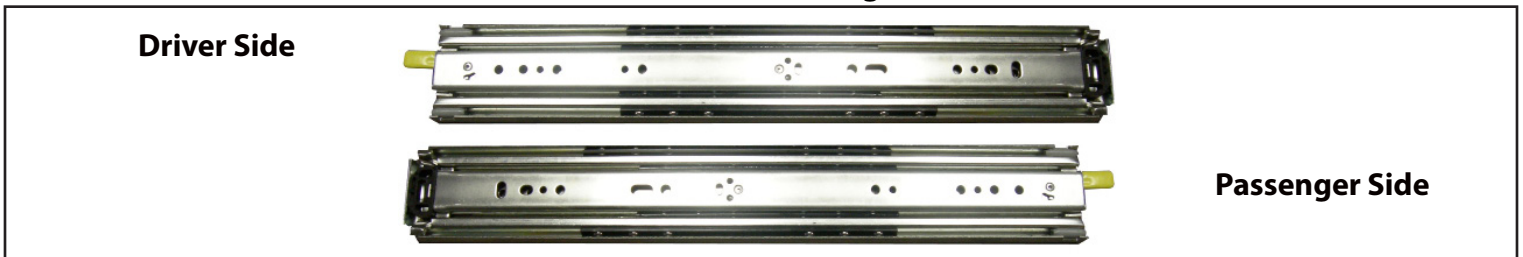

**Diagram 2**

**View showing bolt placement in Slider**

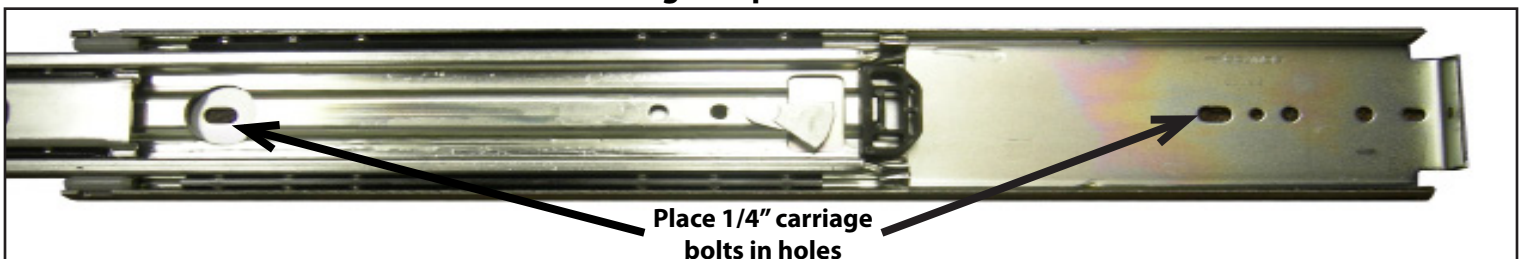

**Diagram 3**

# Enforcement Series

## Trunk Tray

Installation Instructions

### 38312

Chevy Caprice '11-'15


- Position the bottoms of the brackets as shown in **Diagram 5**. The driver and passenger brackets must be positioned squarely with the other and spaced with **a gap of 40 1/2"** between. Once brackets are squared up use (2) sheet metal screws to attach the bracket to the trunk floor. Tighten the top mounting carriage bolt at this time.
- Unlatch and slide out the driver side slider and locate the side riser plates at this time. The side riser plates have multiple mounting height positions, to work with different needs. Using (2) 1/4" bolts placed through the slider attach the riser to the slider with (2) 1/4" nuts as shown in **Diagram 6**. Repeat for the passenger side riser.
- Place the tray on top of the slider, and place (1) 1/4" bolt through each of the four holes in the top face, and into the risers. Place (1) 1/4" nylon lock nut onto each nut at this time and tighten all hardware.
- The carpeted tire cover panel will need to be trimmed at this point. Trim carpet as show in **Diagram 7**. Reinstall the carpet at this time.

**Top View of Driver Bracket #38312-5**



**Diagram 4**

**Bottom View of Driver Bracket #38312-5**

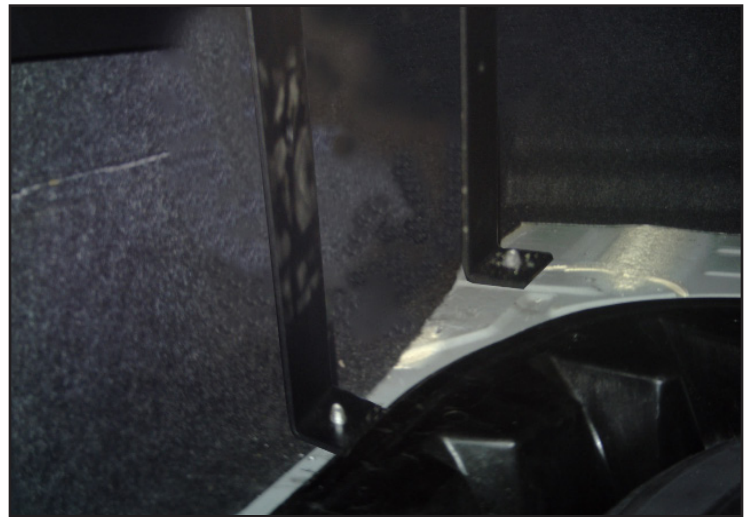


**Diagram 5**

**View of Riser Mounted**



**Diagram 6**

**Driver Side View of Rear Carpet area to Trim**

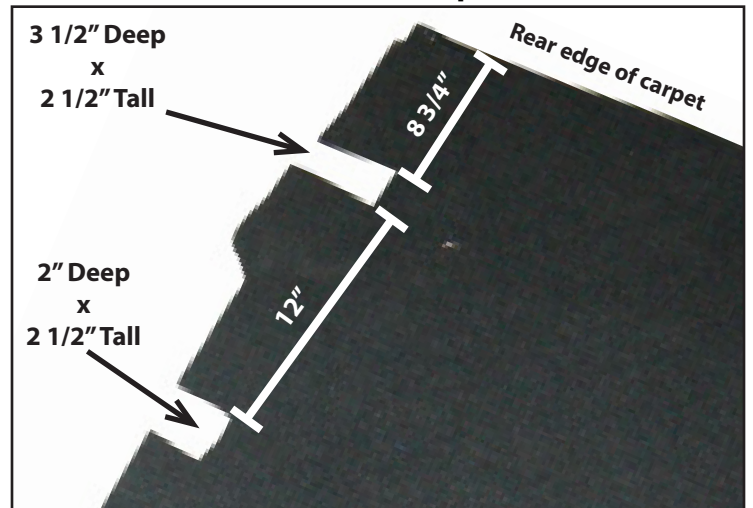

**Diagram 7**