


## Enforcement Series

### Trunk Tray

Installation Instructions

# 38314

Ford Interceptor '12-'15

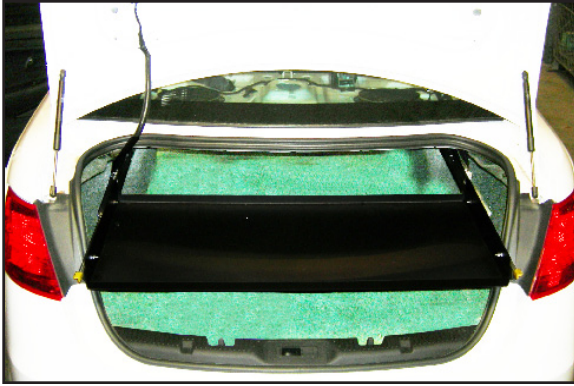

**Diagram 1**

#### Parts List:

1- Tray	1- Driver side Slider
1- Driver Side Main Bracket #38314-5	1- Pass. Side Slider
1- Pass. Side Main Bracket #38314-6	4 - 1/4" x 3/4 Carriage Bolts
2 - Rear Support Brackets #38314-7	12- 1/4" x 3/4" Bolts
2 - Top mount Brackets #38314-9	16- 1/4" Nylon Lock Nuts

\*May include extra hardware.

### **Note: Completely read instructions before beginning installation!**

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase. Refer to **Diagrams 2 and 3** for visual reference.
2. Remove both the upper and lower sections of the rear seat.
3. Remove the C pillar trim panels, shown in **Diagram 4**, by removing bolt and popping out panel.
4. Remove the factory package tray/rear deck self cover.
5. Two people are recommended for this step. Use **Diagrams 5, 6, 7, 8 and 9** for pictorial assistance. Place driver side main bracket #38314-5 on the under side of the rear deck shelf and align with the holes in shelf. Place one of the top mount brackets #38314-9 on the top of the rear deck shelf, aligning the holes with the self and main bracket below it. Only three of the four will align at this time. Insert (1) 1/4" x 3/4" bolt through each of the three holes, going through the top main bracket the rear deck shelf and the driver main bracket. Place (1) 1/4" nylon lock nut onto each of the three bolts. Repeat this step for the passenger side main support bracket #38314-6. Do not tighten the bolts at this time.
6. There will be a fourth hole on the mounting brackets both on top and bottom of the rear deck shelf, this can be seen in **Diagrams 5, 6, 7 and 8**. Using the brackets as a guide drill (1) 1/4" through the rear deck shelf on each side. Insert (1) 1/4" x 3/4" bolt through the brackets and shelf and place (1) nylon lock nut on each side.
7. Install the slider onto the corresponding main brackets using the holes shown in **Diagram 5 and 6**. Use (2) 1/4" carriage bolts and (2) 1/4" nylon lock nuts slider. The bracket #38314-7 need to be placed on the outside of the main brackets on the hole closest to the truck opening shown in **Diagram 9**. Snug the bolts but do not fully tighten at this time.
8. Slide the sliders to the extended out position and place the truck tray between the slider. Attach the tray to the sliders using (2) 1/4" bolts and (2) 1/4" nylon lock nuts per slider.
9. Brackets #38314-7 need to be attached to the tab in the car using (1) 1/4" x 3/4" bolt and (1) 1/4" nylon lock nut. Use **Diagram 9** for reference.
10. Tighten all hardware at this time, making sure to level and center the tray.

# Enforcement Series


## Trunk Tray

Installation Instructions

### 38314

Ford Interceptor '12-'15

**Brackets #38314-5 and #38314-6**

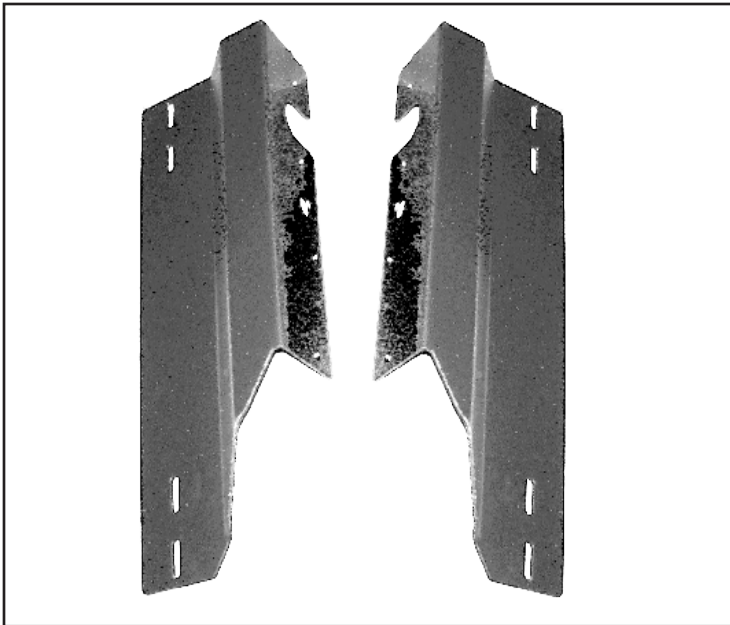

**Diagram 2**

**Brackets #38314-7 and #38314-9**




**Diagram 3**

**C Pillar Trim Panel**



**Diagram 4**

**Driver Side Slider Installed and Extended on Bracket #38314-5**

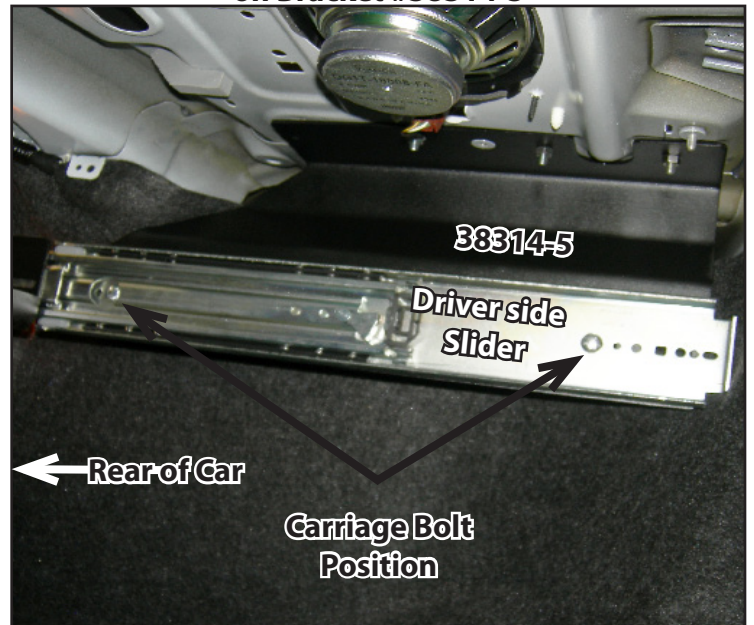

**Diagram 5**

# Enforcement Series

## Trunk Tray

Installation Instructions

### 38314

Ford Interceptor '12-'15

**Driver Side Slider Installed and Extended on Bracket #38314-5**

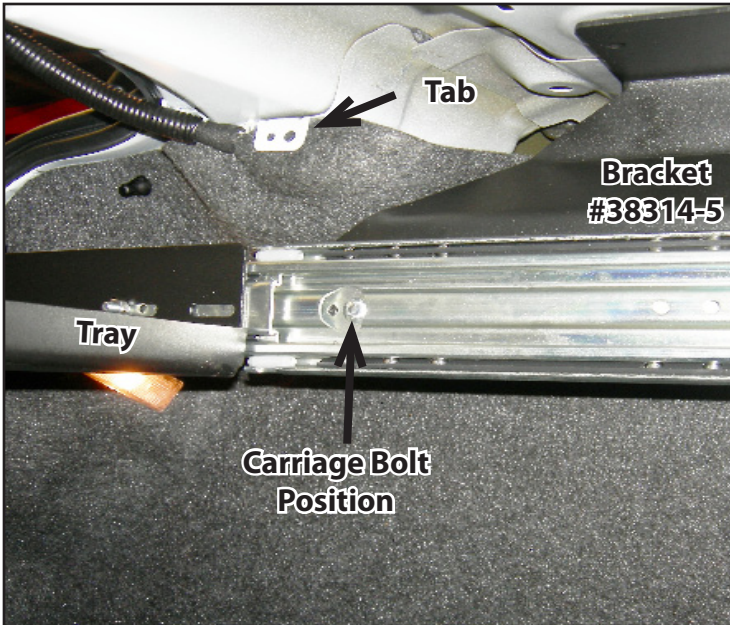


Diagram 6

**Bracket #38014-9 Placement**

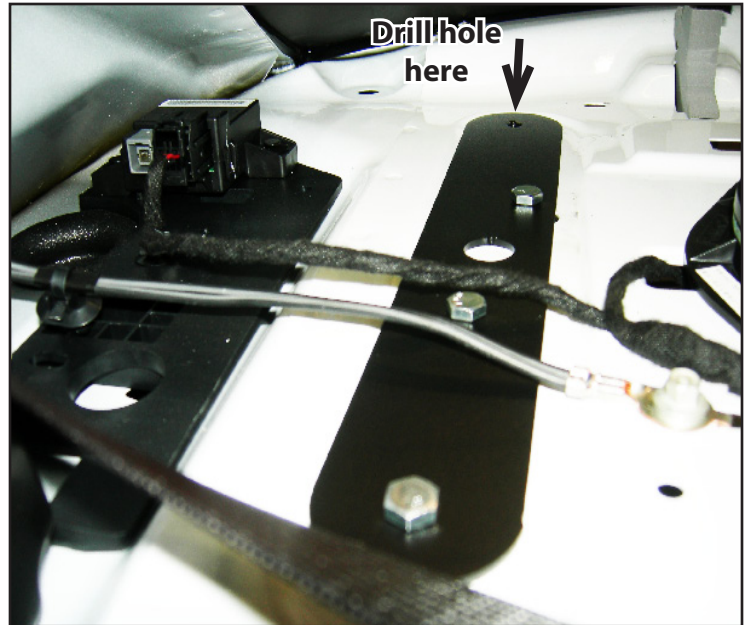


Diagram 7

**View Looking Towards the Front of Car Showing Passenger Side Bracket # 38314-6 Installed**

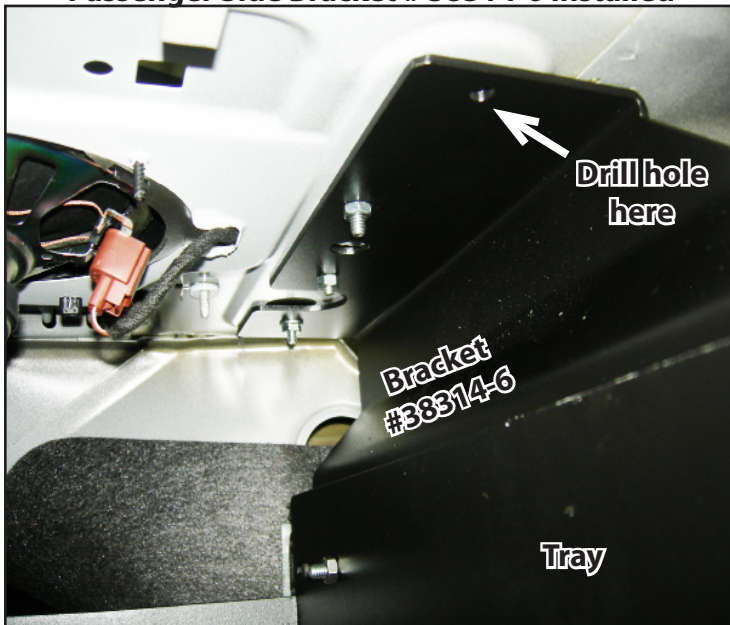


Diagram 8

**View Looking Towards the Front of Car Showing Driver Side Assembly Fully Installed**

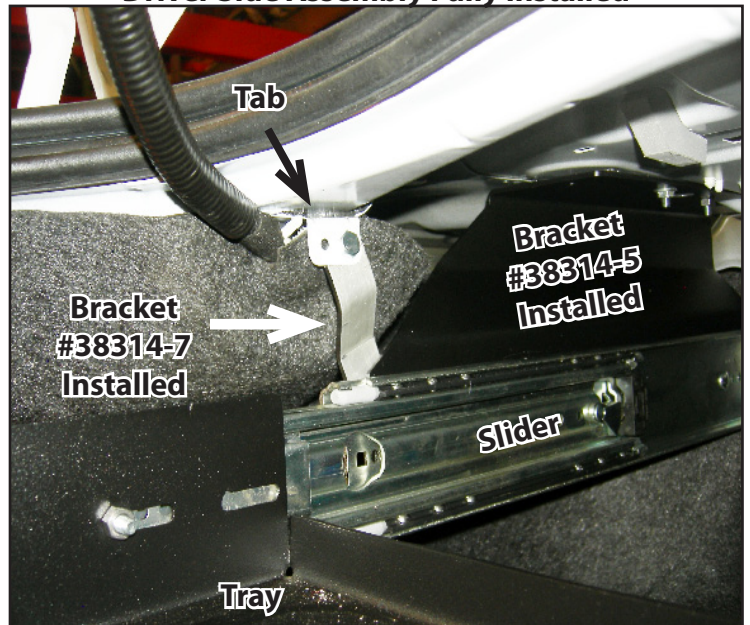


Diagram 9