

# Enforcement Series Skid Plate

Installation Instructions

**38605**

Dodge Charger '06 -'10


**Note: Completely read instructions before beginning installation!**

**Parts List:**

1- 38605 Skid Plate

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Remove clips and (4) bolts holding the under engine plastic splash shield, shown in **Diagram 1**, on the vehicle. Remove the splash shield and set to the side, save the clips and bolts for the new Skid Plate.
3. Place the #38605 skid plate in the same place and position as the factory splash shield and align the (4) bolt holes.
4. Install and tighten the (4) bolts removed in step #2. Install all clips holding the under bumper valence to the skid plate.
5. Check for any loose plastic underpanels and double check all bolts are tightened.

**Plastic Splash Shield**

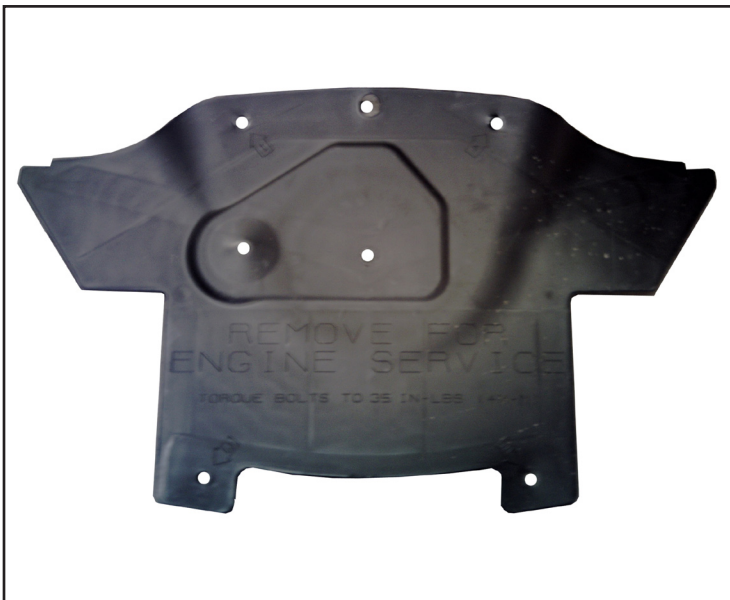

**Diagram 1**

**38605 Skid Plate**



**Diagram 2**