

Rancher Grille Guard

Installation Instructions

44669 / 46669

Dodge Ram 2500/3500 '10 - '17

Ram Chassis Cab 3500/4500/5500 '11-'17

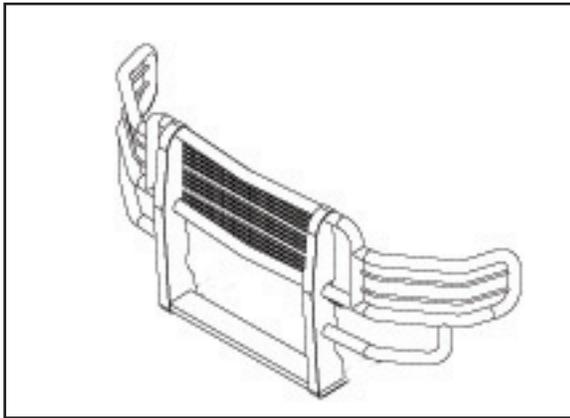


Diagram 1

Parts List:

1 - Rancher Grille Guard	8 - 7/16" x 1 3/4" Bolts
1 - Driver Bracket #46669-5	16 - 7/16" Flat Washers
1 - Passenger Bracket #46669-6	8 - 7/16" Nylon Lock Nuts
6 - 1/2" x 1 1/4" Bolts	
12 - 1/2" Flat Washers	
6 - 1/2" Lock Washers	<i>*May include extra hardware.</i>
6 - 1/2" Nuts	

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. If The truck not equipped with tow hooks skip to the next step. If the truck in equipped with tow hooks, remove the four bolts holding each tow hook in place and remove the tow hooks. These are shown in **Diagram 2**.
3. Place the factory tow hook onto the driver side bracket #46669-5 and position bracket and tow hook onto the bumper, aligning the four holes. The bracket will be sandwiched between the bumper and tow hook. Using (4) 7/16" x 1 3/4" bolts, (8) 7/16" flat washers, and (4) 7/16" nylon lock nuts attach the bracket and tow hook to the bumper. If the truck is not equipped with tow hooks position the bracket onto the bumper aligning the four holes. Attach the bracket to the bumper using (4) 7/16" x 1 3/4" bolts, (8) 7/16" flat washers, and (4) 7/16" nylon lock nuts. Hand tighten at this time. Repeat the above procedure to install the passenger bracket #46669-6, as shown in **Diagrams 3 & 4**.
4. Using two people align the grille guard up to the brackets installed on the truck. Place (1) 1/2" x 1 1/4" bolt with (1) 1/2" flat washer through each of the six holes in the guard and brackets.. Place (1) 1/2" flat washer, (1) 1/2" lock washer, and (1) 1/2" nut onto each of the 1/2" x 1 1/4" bolts. Hand tighten at this time.
5. Tighten the brackets to the vehicle first, then tighten all bolts on the grille guard ensuring that the grille guard remains centered on the vehicle.

Rancher Grille Guard

Installation Instructions

44669 / 46669

Dodge Ram 2500/3500 '10 - '17

Ram Chassis Cab 3500/4500/5500 '11-'17

View of Driver Side Tow Hook

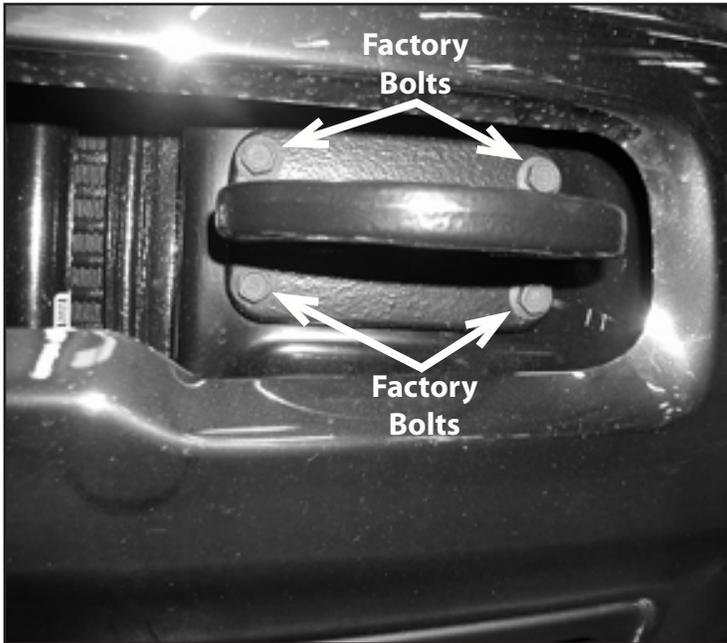


Diagram 2

View of Bracket #46669-6 Installed Without Tow Hook



Diagram 3

View of Driver Bracket #46669-6 Attached

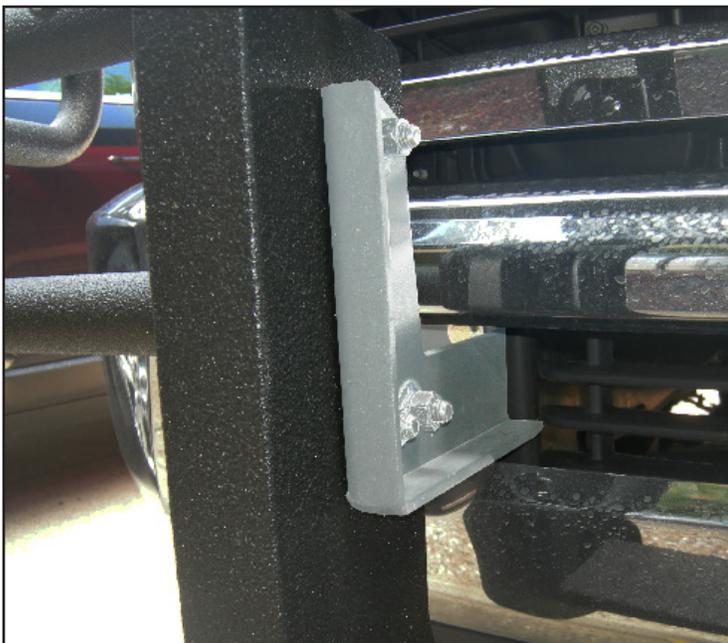


Diagram 4