



# Enforcement Series Safe Box

Installation Instructions

**50006**

Chevy Tahoe 2007 - 2019

420 N. Grove, Richardson, TX 75081  
Tele: (800) 527 - 4345 Fax: (800) 442 - 5263  
Web site: [www.goindustries.com](http://www.goindustries.com)  
E-mail: [gosupport@goindustries.com](mailto:gosupport@goindustries.com)



**Note: Completely read instructions before beginning installation!**

### Materials Needed for Installation:

#### Parts List:

- (1) - Enforcement Series Safe Box
- (1) - Driver Riser Bracket
- (1) - Passenger Riser Bracket
- (1) - 50006KIT Hardware Kit

### Hardware Kit Contents:

#### 50006KIT

- (10) 1/4 - 20 x 1" carriage bolts
- (10) 1/4" flat washers
- (10) 1/4 - 20 nylon locking nuts
- (4) 10mm 1.5 x 40mm hex head bolt
- (4) 10mm lock washers
- (4) 10mm flat washers

\*Extra hardware may be included\*





420 N. Grove, Richardson, TX 75081  
Tele: (800) 527 - 4345 Fax: (800) 442 - 5263  
Web site: www.goindustries.com  
E-mail: gosupport@goindustries.com

# Enforcement Series Safe Box

Installation Instructions

**50006**

Chevy Tahoe 2007 - 2019

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Use caution on this step, as the box can become unstable and flip over. Slide the drawer in the box fully out. On each slider is a triangle piece that needs to be pushed up and the drawer pulled out simultaneously, which is shown in **Diagram 1**. Fully remove the drawer by continuing to slide it out fully, once it is free of the sliders set it to the side. It is recommended to check the position of the drawer divider at this time, and readjust if for the users needs.
3. Remove the rear sill plate trim to access the floor of the cargo area beneath the floor covering. It may be necessary to remove the floor covering to locate the factory threaded holes in the floor of the vehicle (**Diagram 2**). Once located, insert the four 10mm bolts into the threaded holes. replace the floor covering and trim around the heads of the bolts using a razor knife, to allow them to thread easily once the floor covering is replaced. Remove the 10mm bolts and set aside for installation later.
4. Carefully place the box onto the rear floor of vehicle, trying to center the box in the rear floor. Once inside of the vehicle, stand the box on it's rear panel to gain access to the bottom side of the box.
5. Place the box risers to the underside of the box and align the holes for the mounting hardware. Place the ten 1/4" carriage bolts (5 on the left and 5 on the right) through the bottom of the box and risers. Place a 1/4" flat washer and a 1/4" nylon locking nut on each of the 1/4" carriage bolts and tighten until only slightly loose to allow room for adjustment. See **Diagram 3**
6. You may now carefully stand the box on the risers and position the floor mounting slots in the risers over the previously located and trimmed threaded holes in the vehicle floor. Install the 10mm bolts with a 10mm lock washer and a 10mm flat washer through the risers and into the floor. See **Diagram 4**
7. Adjust the riser and box location as necessary and tighten all hardware.
8. Reinstall the bottom drawers removed in step 2. It is recommended again for two people to reinstall the drawer. The tab does not need to be pushed on the slider for the drawer to be reinstalled. The sliders on the box and drawer just need to be lined up and the the drawer closed, that will lock the sliders.
9. Reinstall the rear sill plate trim to complete the installation.

**Note: Re-check all hardware for proper tightness upon completion and periodically inspect hardware and parts for signs of wear throughout the life of the product.**

# Enforcement Series Safe Box

Installation Instructions

**50006**


Chevy Tahoe 2007 - 2019



**Diagram 1**



**Diagram 2**

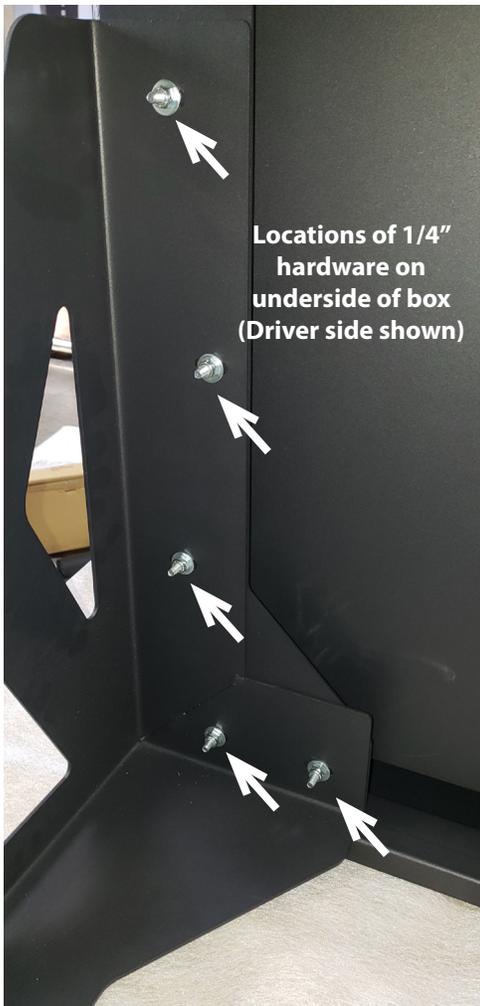

**Diagram 3**



**Diagram 4**