



420 N. Grove, Richardson, TX 75081  
Tele: (800) 527 - 4345 Fax: (800) 442 - 5263  
Web site: [www.goindustries.com](http://www.goindustries.com)  
E-mail: [gosupport@goindustries.com](mailto:gosupport@goindustries.com)

# Enforcement Series Safe Box

Installation Instructions

## 50026

Chevy Tahoe '07 -'16



### Parts List:

- 1 - Box
- 2 - Rear Brackets (2007 - 2014) #50007-5
- 2 - Front Brackets #50007-7
- 2 - Rear Brackets (2015 and up) # 50007-9
- 6 - Self tapping screws
- 2 - M8 - 1.25 x 50 bolts

\*May include extra hardware.

## **Note: Completely read instructions before beginning installation!**

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Use caution on this step, as the box can become unstable and flip over. Slide the drawers in the box fully out. On each slider is a triangle piece that needs to be pushed up and the drawer pulled out simultaneously, which is shown in **Diagram 2**. Fully remove the drawer by continuing to slide it out fully, once it is free of the sliders set it to the side. It is recommended to check the position of the drawer divider at this time, and readjust if for the users needs.
3. On 2014 and older models, remove the two rearward (closest to the rear hatch) floor mounted hooks, and save the bolts. For 2015 and newer models, remove the rear sill plate trim and raise up the floor covering to locate the 2 threaded holes in the floor and cut 2 small slits in the floor covering to access them.
4. Carefully place the box onto the rear floor of vehicle, trying to center the box in the rear.
5. Lift and support the drawer side of the box approximately 6", for access of mounting the rear brackets 50007-5 or 50007-9. Place the large hole of the bracket over the threaded mounting hole. Place the bolts through the brackets and thread into the factory holes in the floor, do not fully tighten at this time. In some instances it may be required to remove a swath of the underlayment padding around the holes for the brackets to set properly.
6. Lower the box down onto the floor, carefully making sure the brackets 50007-5 are not catching the sides of the box.
7. Remove (2) of the seat bolts located near the front of the box. Place brackets 50007-7 over the holes and place the factory bolt through brackets and snug, shown in **Diagrams 3 and 4**.
8. For 2014 and older models, align brackets 50007-5 against the square tubing structure on the inside of the box. Once again lift and support the drawer side of the box, making sure the brackets do not move in the process. Tighten down the factory bolts used on brackets 50007-5, making sure to not move the brackets when tightening. For 2015 and newer models tighten the 50007-9 brackets using the provided metric hardware in the same manner.
9. Lower the safe box back down making sure the brackets line up with the inside square structure tube.
10. Insert (1) screw in each of the brackets 50007-7, using the self tapping ability of the screws screw them into the end of the box as pictured in **Diagram 5**. Then, screw (2) screws in to each rear bracket (50007-5 or 50007-9) tapping them into the square tube structure, as pictured in **Diagram 6**
11. Reinstall the bottom drawers removed in step 2. It is recommended again for two people to reinstall the drawer. The tab does not need to be pushed on the slider for the drawer to be reinstalled. The sliders on the box and drawer just need to be lined up and the the drawer closed, that will lock the sliders.

## Enforcement Series Safe Box

Installation Instructions

**50026**

Chevy Tahoe '07 -'16

### Brackets 50007-5 & 50007-7(Top) 5000-9(Bottom)

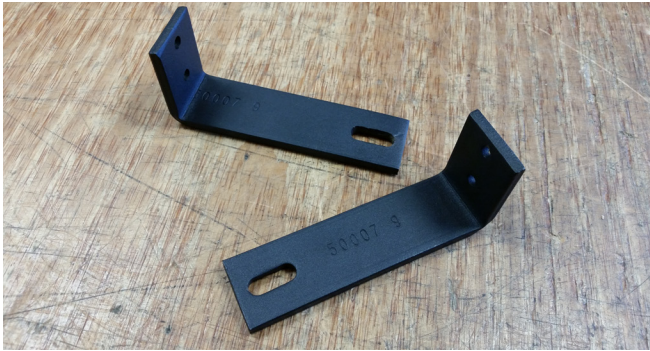
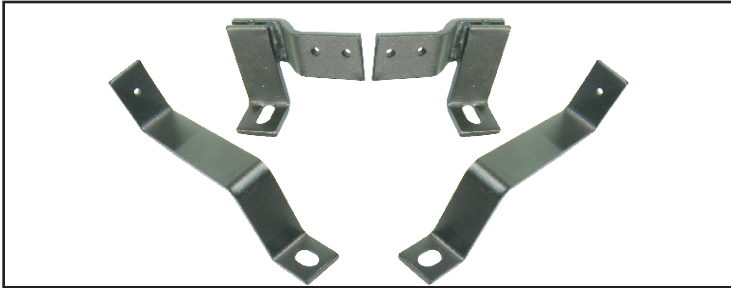


Diagram 1

### View of Slide Release

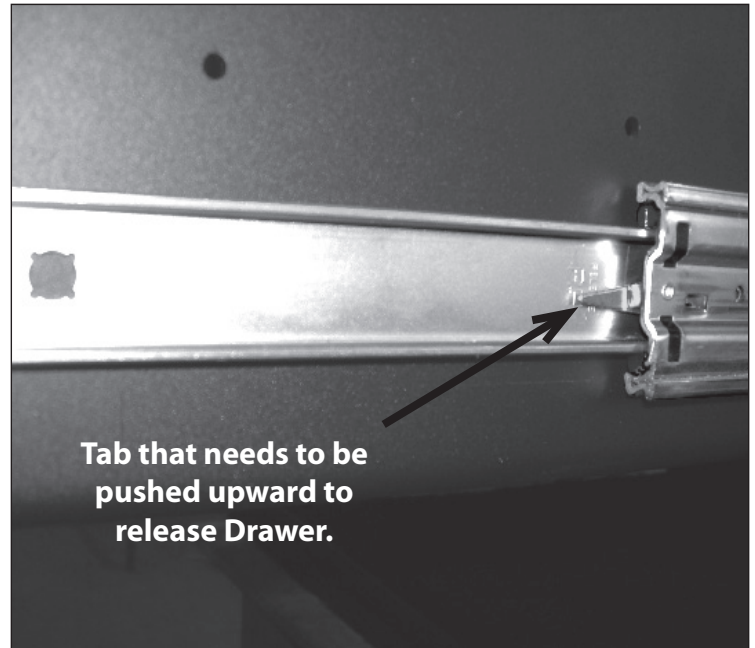


Diagram 2

### Area to Mount Front Brackets

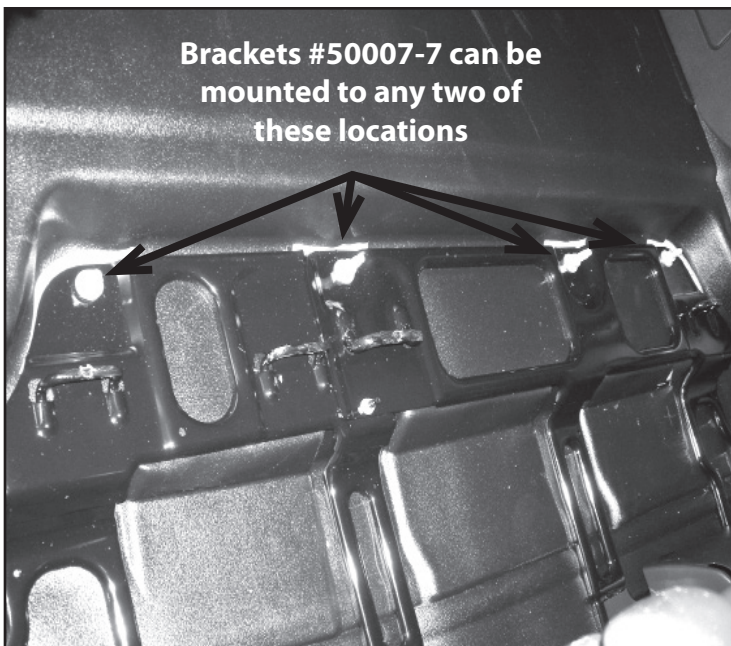


Diagram 3

### Front Bracket #50007-7 Installed Passenger Side



Diagram 4




## Enforcement Series Safe Box

Installation Instructions

**50026**


Chevy Tahoe '07 -'16

**Front Bracket #50007-7 Installed Driver Side**

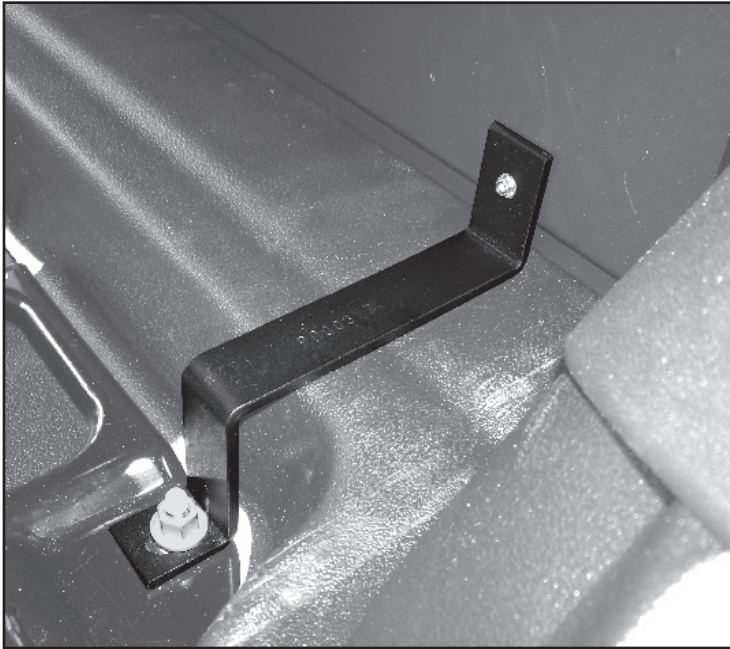

**Diagram 5**

**Rear Bracket #50007-5 Installed On Driver Side**

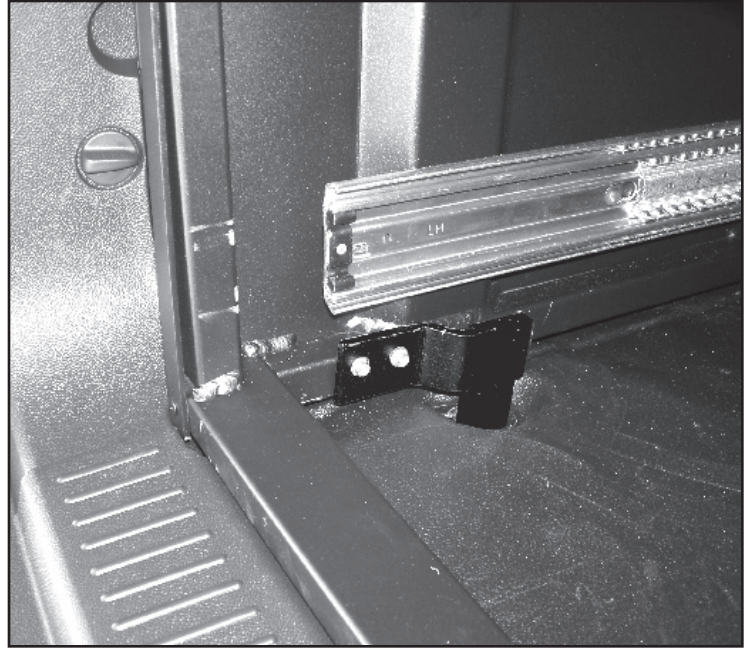

**Diagram 6**