


## Dually Mud Flap

### Bracket Set

Installation Instructions

# 70736B

Chevy Silverado/GMC Sierra  
3500 Dually '11-'15

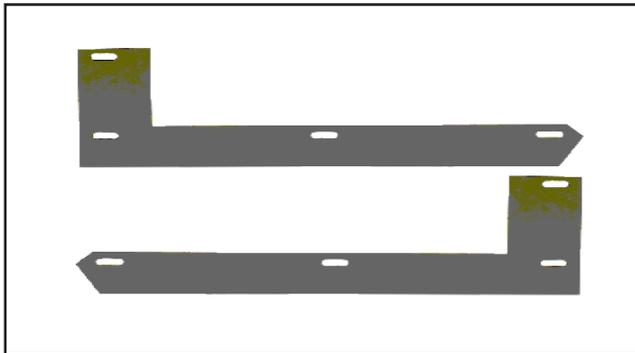

**Diagram 1**

#### Parts List:

2 - Brackets #070736	4 - 5/16" Flat Washers
4 - 5/16 x 1 1/4" Carriage Bolts	4 - 5/16" Nylon Lock Nuts
4 - M6 x 30mm Bolts	
4 - 1/4" Fender Washers	<b>*May include extra hardware.</b>

### **Note: Completely read instructions before beginning installation!**

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Most mud flaps will need 4 hole drilled through each flap out using a 3/8" drill bit. Three holes will need to be drilled on the top portion of the, mud flap lining up with the three horizontal slotted holes in the brackets. The forth hole will be drilled in the following steps.
3. Attach the bracket to the a mud flap using (2) 5/16 x 1 1/4" carriage bolts, (2) 5/16" flat washers and (2) 5/16" nylon lock nuts in the locations indicated in **Diagram 2**. The carriage bolts will need to be placed with the head on the metal side of the bracket and the threads going through to the mud flap.
4. Remove the three bolts as shown in **Diagram 1** from the driver side inner fender of the truck. The top larger bolt will be reused and the 2 smaller bolts will not be reused.
5. Position the mud flap and bracket as shown in **Diagrams 3 & 4**. The bracket will be mounted against the inner fender and the mud flap to towards the tires. Insert the larger bolt removed in step 4 through the top ear of the bracket and into the factory hole on the truck. Place (1) 1/4" fender washer onto (1) of the M6 x 30mm bolts. Place the bolt with washer through the mud flap and bracket in the top corner threading the bolt into the factory hole. Gently snug all hardware.
6. The bracket and mud flap need to be mounted on the truck to located the position t of he forth hole to be drilled in the mud flap. The hole will need to be lined up with the lower factory bolt removed in step 4 and using **Diagrams 2 & 4** for reference. The drill location needs to be marked on the mud flap.
7. Remove the bracket and mud flap from the truck at this time.
8. Using the mark from step 6, drill one hole using a 3/8" drill bit.
9. Reinstall the mud flap and bracket as done in step 5.
10. Place (1) 1/4" fender washer onto (1) of the M6 x 30mm bolts. Insert one bolt with washer through the lower hole drilled into the mud flap in step 8 and into the lower factory hole, where one of the smaller bolts was removed in step 4. The installed bolt is shown in **Diagram 4**.
11. Repeat the above steps for the passenger side mud flap installation.

# Dually Mud Flap Bracket Set


## Bracket Set

Installation Instructions

### 70736B

Chevy Silverado/GMC Sierra  
 3500 Dually '11-'15

**Driver Side Rear Inner Fender view**

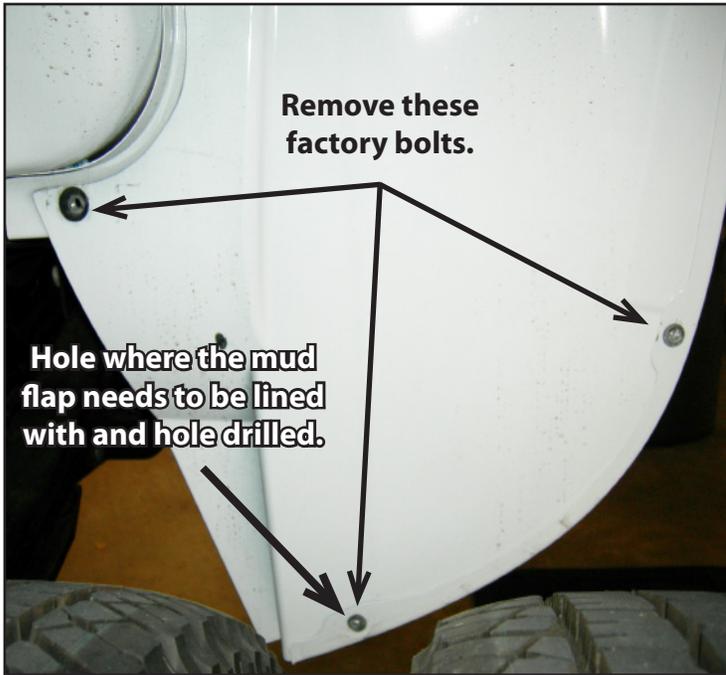


**Diagram 2**

**Driver Side Rear Inner Fender with Bracket for Reference only**



**Diagram 3**

**Example of Driver Side Bracket and a Mud Flap Installed**

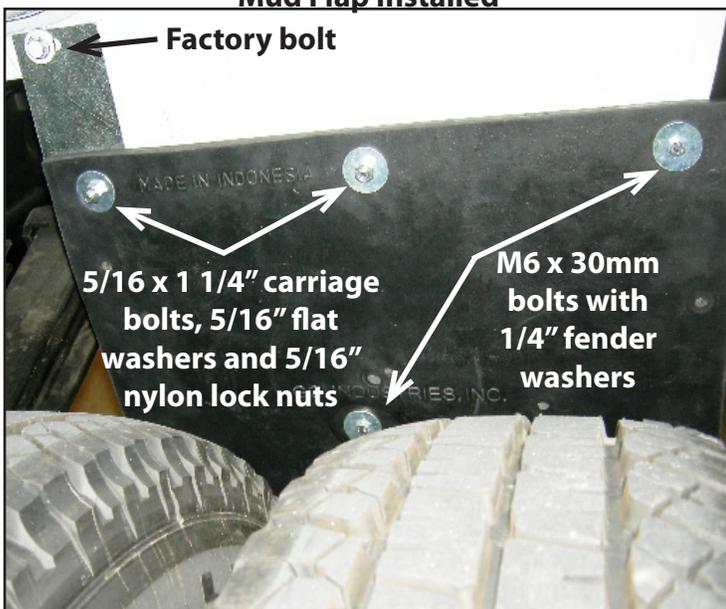

**Diagram 4**