

INDUSTRIES, INC


Mud Flaps

Installation Instructions

Part Number 70738B

' 2001 Dodge Dually

1. Attach mud flap to bottom of bracket using supplied nuts, bolts, and washers. Also attach optional Go Stainless Steel Mud Flap Weights and Anti-Sail brackets at this time, if purchased.
2. Remove the innermost bolt closest to frame at the rear of the inner fender well. Drill out the threaded rod where this bolt attaches. This is to accommodate the 1/4" x 1 1/2" bolt. Use this bolt to attach mud flap bracket to the fender well. { See "A" below }
3. Using level to make sure the mud flap hangs level and using the second hole in the top of the bracket. Drill a hole thru the pinch weld of the truck. Attach bracket through this hole using supplied 1/4" x 1" bolt, nut, and washer. { See " B " below }

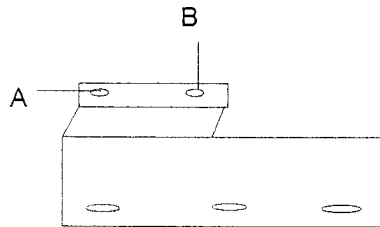

driver side bracket shown

Go Industries, Inc
420 N. Grove
Richardson, Tx 75081
(972) 783-7444