

**Mud Flaps**  
 Ford Super Duty Dually  
 1973 - 1998  
 726 - 726SET - D726SET - S726SET

726 Contains:  
 2 - 726 Brackets  
 2 - 726 Braces  
 2 - Mud Flaps  
 2 - 70730 Bolt Kit  
 1 - Mud Flap Kit

726SET Contains:  
 2 - 726 Brackets  
 2 - 726 Braces  
 2 - Mud Flaps  
 2 - 70730 Bolt Kit  
 1 - Mud Flap Kit  
 2 - Anti-Sails  
 2 - 719 SS Plate  
 2 - 719 Bolt Kit

D726SET Contains:  
 2 - 726 Brackets  
 2 - 726 Braces  
 2 - Mud Flaps  
 2 - 70730 Bolt Kit  
 1 - Mud Flap Bolt Kit  
 2 - D719 Diamond Plate  
 1 - 719 Bolt Kit  
 2 - D718 Diamond Plate  
 2 - 714 Rivet Kit

S726SET Contains:  
 2 - 726 Brackets  
 2 - 726 Braces  
 2 - Mud Flaps  
 2 - 70730 Bolt Kit  
 1 - Mud Flap Bolt Kit  
 2 - 719 SS Plate  
 1 - 719 Bolt Kit  
 2 - 718 SS Stiffener  
 1 - 714 Rivet Kit

1. Remove the contents from the box and check for damage. Verify all parts are present. Read the instructions completely before beginning.

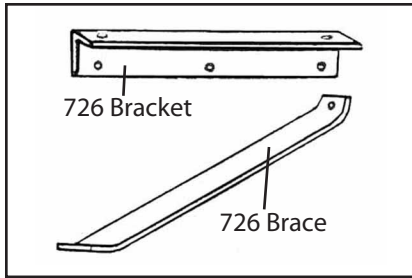


Diagram 1

726 Bracket & 726 Brace Attached Together


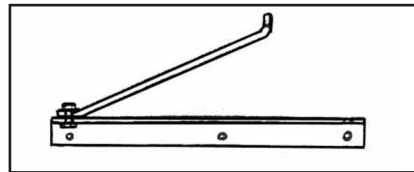


Diagram 2

2. Locate the 726 bracket and the 726 brace as shown in Diagram 1. Place the 726 bracket and the 726 brace together as shown in Diagram 2.

3. Place the brackets as shown in Diagram 2 into the fender well. As shown in Diagram 3 mark the spots on the inner bed wall and drill a 11/32 hole. Using the 5/16" bolts attach the 726 bracket and 726 brace to the inner bed wall. Attach Mud Flaps to the 726 bracket using bolts provided with smooth side of Mud Flaps should be closest to tire. Repeat procedure for the passenger side. Make sure all bolts and nuts are tight.

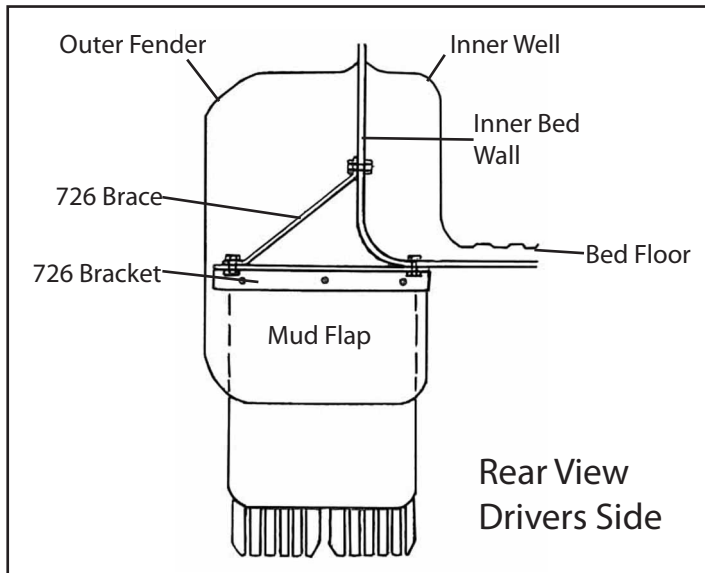

Rear View  
 Drivers Side

Diagram 3