



Diagram 1

Spare Tire Mount

Installation Instructions

7412

Parts List:

- 1 - Spare Tire Mount
- 4 - 3/16" x 1" Screws
- 2- 3/16" x 1" Hex Bolt
- 6 - 3/16" Nylon Lock Nuts

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase. Read the instructions completely before beginning.

2. Place spare tire mount in bed of vehicle and adjust slides to fit bedside as shown in **Diagram 2**. Line up the spare tire mount between the tailgate and inner fender well. Mark the holes on top and bottom of the spare tire mount to drill. Make sure the area underneath the truck box is clear of electrical wires for the bottom 2 holes. Use a 3/16" bit to drill the four holes required. Place (1) 3/16" x 1" screw through each hole drilled and put (1) 3/16" hex nut onto screw. Tighten all screws, careful not to over tighten. Remove the nut and plate from spare tire mount. Place spare tire up to the spare tire mount, line up the bolt with the hole in the wheel. Replace nut and plate then tighten the bolt to snug.

View of Spare Tire Mount on Vehicle

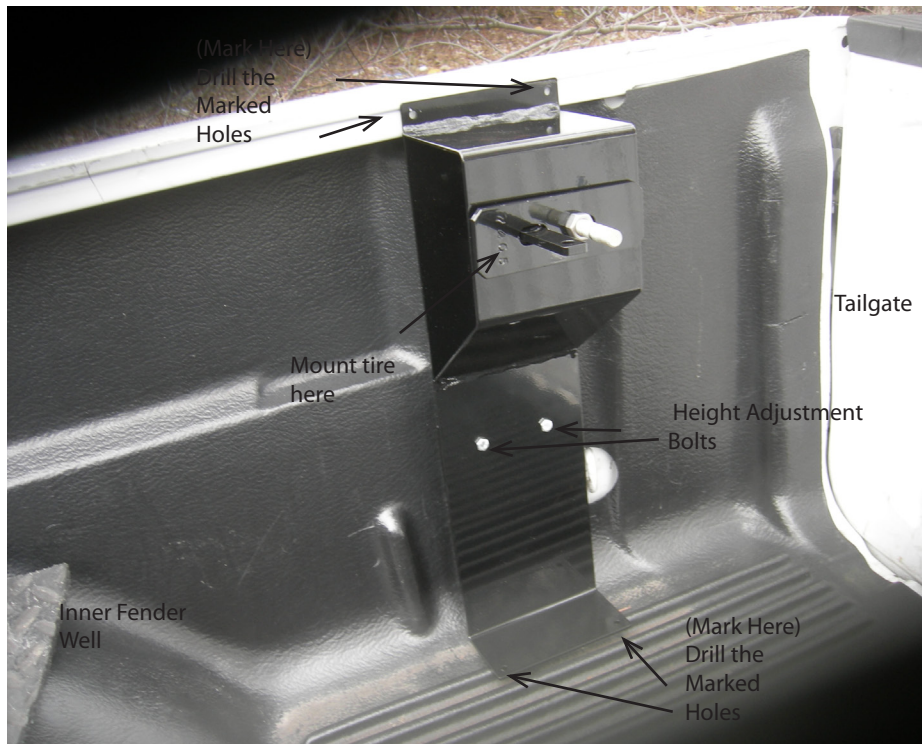


Diagram 2