



420 N. Grove, Richardson, TX 75081  
 Tele: (800) 527 - 4345 Fax: (800) 442 - 5263  
 Web site: www.goindustries.com

# Tow Hook Re-Installation Kit

Installation Instructions

Chevy Silverado 1500 2014 - 2018

GMC Sierra 1500 2014 - 2018

Chevy Tahoe 2015 - 2018

Chevy Suburban 1500 2015 - 2018

## Parts List:

- (3) - 38737-9 1" x 1/2" Round Spacer
- (1) - 38737KIT Hardware Kit
  - (2) 1/2" x 5 1/2" Hex Bolt Gr.5 Black Xylan
  - (2) M12 - 1.75 x 50mm Hex Bolt Gr.5 Black Xylan
  - (4) 1/2" Flat Washer Black Xylan
  - (2) 1/2" Nylon Locking Nut Black Xylan

\*Extra hardware may be included\*




**Note: Completely read instructions before beginning installation!**

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.

**\*\*First flip the tow hooks over and place the tow hooks in the ends of the brackets (the tow hooks will be pointing up)\*\***

2. **On the driver side:** Use (1) 1/2" x 5 1/2" bolt, (1) 1/2" flat washer with the head of the bolt coming from the outside towards the inside of the bracket. The bolt will go in the front lower hole; through the Grille Guard upright, the outer side of the mounting bracket, (1) 38737-9 round spacer, the tow hook, and the inner side of the mounting bracket. Then place (1) 1/2" flat washer and (1) 1/2" nylon locking nut onto the threaded end of the bolt and hand tighten at this time. On the rear lower hole, use an M12 x 60 bolt going from the outside of the vehicle towards the inside of the bracket and; through the Grille Guard upright, the outer side of the mounting bracket, (1) 38737-9 round spacer, threading into the tow hook.
3. **On the passenger side:** Use (1) 1/2" x 5 1/2" bolt, (1) 1/2" flat washer with the head of the bolt coming from the outside towards the inside of the bracket. The bolt will go in the front lower hole; through the Grille Guard upright, the outer side of the mounting bracket, (1) 38737-9 round spacer, the tow hook, and the inner side of the mounting bracket. Then place (1) 1/2" flat washer and (1) 1/2" nylon locking nut onto the threaded end of the bolt and hand tighten at this time. On the rear lower hole towards the center of the vehicle; use a M12 x 60 bolt going from the inside of the vehicle towards the outside of the bracket and; through the inner side of the mounting bracket threading into the towhook. On the rear lower hole towards the outside of the vehicle, use a (1) 1/2" x 1 1/4" bolt with (2) 1/2" flat washers, and (1) 1/2" nylon locking nut as described in step #6 going from the outside of the Grille guard to the inside of the mounting bracket.
4. Re-adjust the grille guard if needed, and torque all 1/2" fasteners to appropriate levels (approximately 75 ft lbs.)


**Note: Re-check all hardware for proper tightness upon completion and periodically inspect hardware and parts for signs of wear throughout the life of the product.**

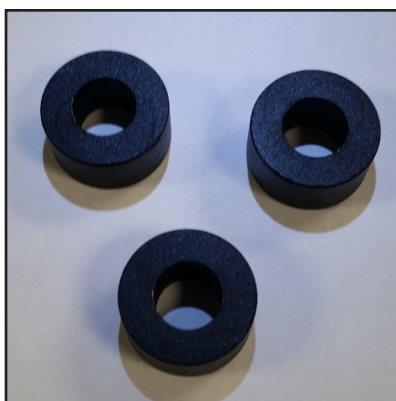

**38737-9 Round Spacers**



**38737KIT**

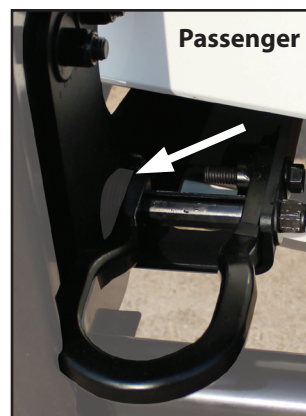

**Round Spacer Locations**

