

Howler Bracket Kit

Installation Instructions

HOW001

Chevy Tahoe '07-'15
Chevy Suburban 1500 07-'15
Chevy Avalanche '07-'14

Howler Bracket

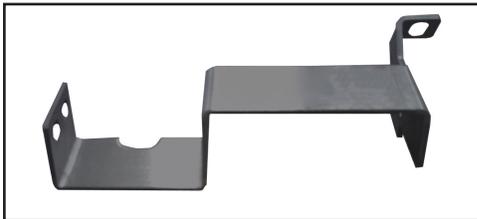


Diagram 1

Parts List:

1- 38733-79
1- 38733-80
2 - 1/2" x 5 1/2" Bolts

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.
2. Loosen the 1/2" bolts used to attach the Go Industries Grille Guard Brackets #46733-5 and #46733-6 to the truck frame. It is not necessary to loosen the bolts attaching the Grille Guard to the Brackets.
3. Support the Driver side of the grille Guard and remove bolts holding Bracket # 46733-5 to the frame.
4. Place bracket #38733-79 on the underside of bracket # 46733-5. With the notch around the bottom bolt of bracket #46733-5.
5. Place the 1/2" x 5 1/2" through the both brackets and the frame, in the same position as the 1/2" x 5 1/2" bolt was removed. Install the other hardware removed in step #2.
6. Support the Passenger side of the grille Guard and remove bolts holding Bracket #46733-6 to the frame.
7. Place bracket #38733-80 on the underside of bracket #46733-6. With the notch around the bottom bolt of bracket #46733-6.
8. Place the 1/2" x 5 1/2" through the both brackets and the frame, in the same position as the 1/2" x 5 1/2" bolt was removed. Install the other hardware removed in step #5.
9. Tighten all hardware at this time.
10. Attach the Howler units to the installed bracket, using hardware supplied with the Howler unit.

View of Bracket #38733-80 installed on bracket #46733-6



Diagram 2

**38733-79 Bracket
Installed**



Diagram 3