


Mud Flaps, 719, 718, D719 & D718
 Installation Instruction
 For all Applications


Parts List:			
2 - Mud Flaps	1 - 719 Kit contains:	1 - Mud Flap Kit Contains:	1 - Rivet Kit Contains:
2 - Diamond Stiffeners #D718	6 - 1/4" x 3/4" Carriage Bolts	6 - 5/16" x 1" Hex Head Bolts	8 - Rivets
2 - Stainless Stiffeners #718	6 - 1/4" Self Locking Nuts	6 - 5/16" Flat Washers	8 - 1/4" Flat Washers
	6 - 1/2" Rubber Washers	6 - 5/16" Lock Washers	
		6 - 5/16" Hex Nuts	

1. Mount the Mud Flaps only to the Brackets: Using Diagram 1, mount the Mud Flaps to the bracket by positioning the flat side of mud flaps toward the tires and on the front side of the brackets. Position the holes on the top of the Mud Flaps over the holes on bracket. If the holes do not align you may have to drill out Mud Flaps holes. We recommend the head of the bolts be against the plastic shield and the nuts, washers face the tires. This allows the greatest amount of clearance between the bolts and the plastic shield on vehicle.

View of Ridge Side of Mud Flap

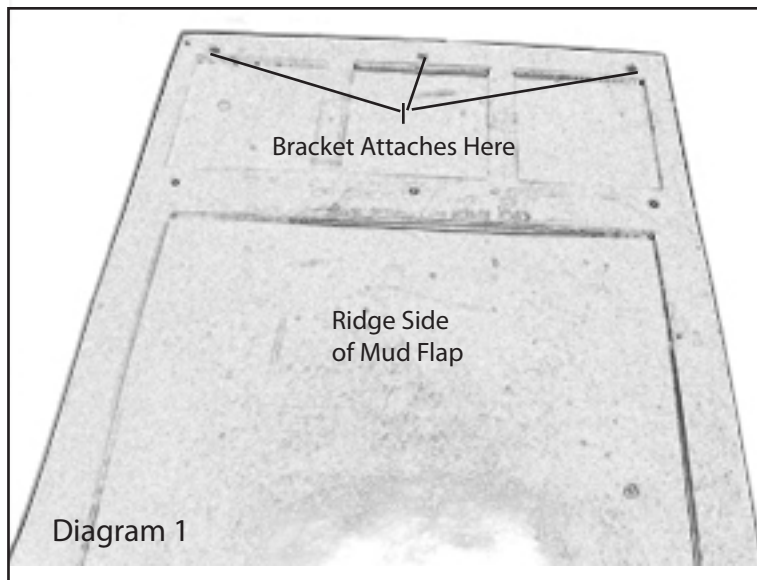

View of Diamond Stffener #D718 & #D719

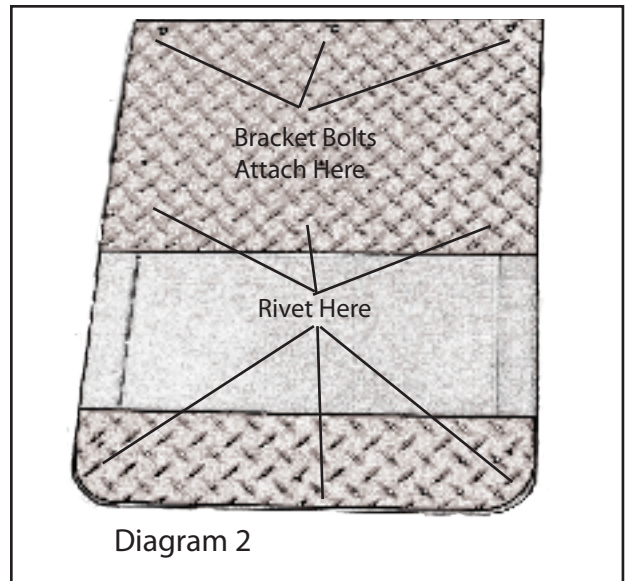

2. Mount diamond #D718 or stainless #718 stiffeners to brackets and mud flaps: Place mud flap on a flat surface with ridged side face up. Place stiffeners onto the mud flap, align the three holes on mud flap with the three holes on stiffeners. Mark the mud flap to drill holes into mud flap for rivets. Use a 3/16" drill bit to drill mud flap on #D718 and #D719

420 N. Grove, Richardson, TX 75081
 Tele: (800) 527 - 4345 Fax: (800) 442 - 5263
 Web site: www.goindustries.com
 E-mail: gosupport@goindustries.com

3. Mount diamond #D718 or stainless #718 stiffeners to brackets and mud flaps: Place mud flap on a flat surface with ridged side face up. Place stiffeners onto the mud flap and align the three holes on mud flap with the three holes on stiffeners. Mark the mud flap to drill holes into mud flap for rivets. Use a 3/16" drill bit to drill mud flap. Attach the plate stiffener with (3) rivets with the washer against the rubber mud flap. Attach the diamond plate weight #D719 or stainless plate weight #718 with (3) rivets with the washer against the rubber mud flap.

View of Stainless Steel Stiffener and Weight

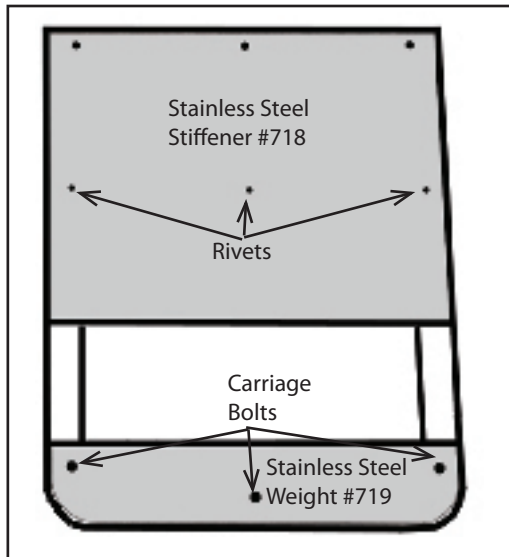


Diagram 3

View of Diamond Plate Stiffener and Weight

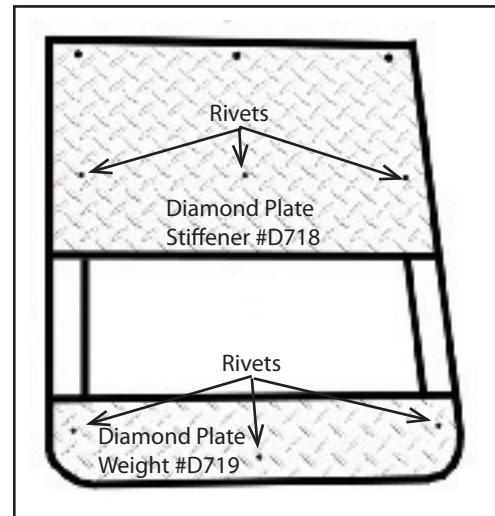


Diagram 4