

## Big Foot Headache Rack

Installation Instructions

**51507, 51508**

All Toyota Pickups

### View of Driver Side of Vehicle

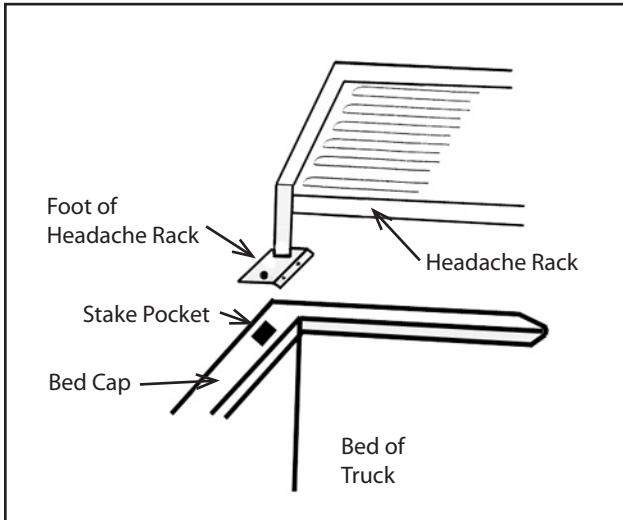


Diagram 1

#### Bolt kit #544:

- 2 - 2 1/2" Threaded Plates
- 2 - 3/8" x 2 1/2" HH Bolts
- 2 - 3/8" Flat Washers
- 4 - 1/4" x 1" Screws

### Instructions for: 51507, 51508

1. See **Bolt Kit #544** for parts. Place (1) 3/8" flat washer onto (1) 3/8" x 2 1/2" HH bolt then place through the foot on the headache rack. Thread the (1) 2 1/2" threaded plate onto (1) 3/8" x 2 1/2" HH bolt a couple of turns. Repeat this step for the other side. Place headache rack onto truck with (2) 2 1/2" threaded plates into the stake pockets. To get threaded plates into stake pockets, turn the threaded plates until the threaded plates go into stake pockets. Center the headache rack on truck. Tighten the (2) 3/8" x 2 1/2" HH bolt until the plate is snug onto stake pocket. For the screws on the inside of the foot take a 1/8" drill bit and drill starter holes. Take (4) 1/4" x 1" screws and tighten screws to snug.