


Big Tex Light Guard
 Installation Instructions
 For all Applications

Backside View of Attached Light Guard

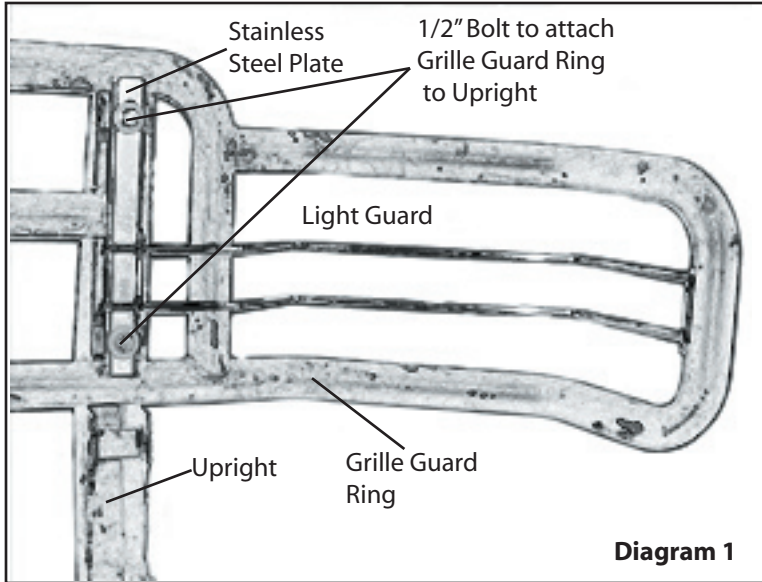

- Parts list:
 2 - Light Guards
 2 - Stainless Steel Plates
 4 - #8 Hex Head Screws
 4 - Rubber Grommets
 4 - Rubber Caps
 2 - Foam Strips

1. Remove the contents from the box and check for damage. Verify all parts are present. Read the instructions completely before beginning.
2. **Prepare Light Guard for Installation:** On Stainless Steel Plate place rubber grommets into round openings.
3. **Install The Light Guard on a Grille Guard:** Using **Diagram 1**, Remove the 1/2" hex head bolts from one side of Grille Guard. **Remove only one side at a time.** Place the stainless steel plate over the bolt openings. Replace the 1/2" hex head bolts, only hand tighten at this time. Place Light Guard through Stainless Steel Plate openings with the rubber grommets. Use a piece of tape to hold Light Guard to ring, do not cover the holes in the plate. Make sure Light Guard is centered in opening. Mark the two holes in flat plate to be drilled. Drill the two holes using a 1/8" drill bit. Remove white backing on foam spacer then place foam spacer onto the end of Light Guard. Before putting #8 hex head screw into drilled holes put some all-weather silicon on screw to reseal Grille Guard Ring. Use the #8 hex head screw through Light Guard plate into drilled holes. Tighten screws to just tight do not over tighten. Tighten 1/2" bolts, place rubber caps on end of Light Guard. Repeat above procedure for opposite side.

View of Light Guard & Grille Guard Ring

