GO INDUSTRIES, INC
Manufacturer of Premium Products Since 1978

420 N. Grove, Richardson, TX 75081
Tele: (800) 527 - 4345 Fax: (800) 442 - 5263
Web site: www.goindustries.com
E-mail: gosupport@goindustries.com

Interior Door Panel

Installation Instructions

38911

Dodge Charger
'11-'14

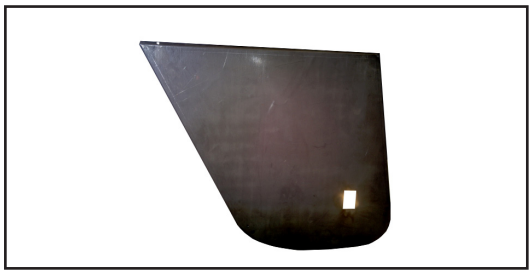

Diagram 1

Parts List:
1- Driver Side Door Panel
1- Pass. Side Door Panel
6 - screws

* May include extra hardware

Note: Completely read instructions before beginning installation!

1. Remove the contents from the box and check for missing pieces or damage. If parts are missing or damaged, contact the original place of purchase.

2. The door panels are designed to be used with Go Industries part #38511 Rear Window Guards only. The window guards need to be installed before proceeding to the next steps, for proper placement of the door panels.

3. The window guards will need to be removed for the factory door panels removal in the next step.

4. Remove the factory door panels from vehicle. The rear window switch will need to be taped or zip tied back onto the wiring, see Diagram #2, for the rear windows to work; if so desired. The rear inside door handles will need to be removed. The courtesy light should be unclipped form the door panel and pushed out the backside, it will be reused.

5. Reinstall the window guards at this time for proper alignment of the door panels.

6. Align the top of the door panel with the bottom lip of the window guards.

7. Insert the courtesy light through the rectangular cutout in the door panel and snap into place.

8. Holding the door panels even with the lower lip of the window guard, use (3) self tapping screws to attach the door panel to the window guard, shown in Diagram # 3. On the bottom of the door panels use (3) self tapping screws in the (3) holes on the panels, shown in Diagram #4.

9. Gently shut the door and watch for any interference with closing. If there is interference remove screws and reposition panel.

View of window switch

Diagram 2

Outside view of Window Guard

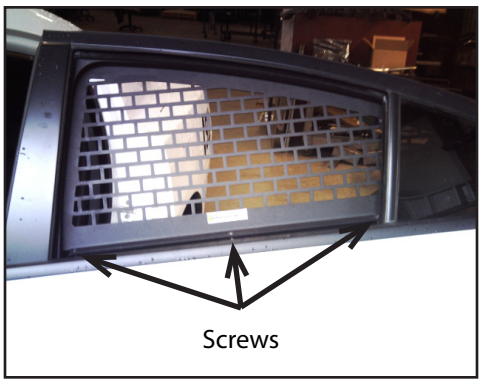

Diagram 3

View of lower Door Panel

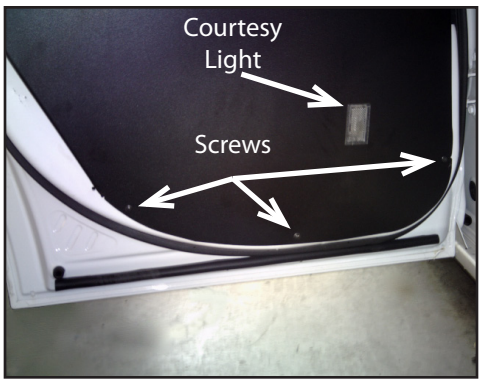

Diagram 4

Thank you for choosing Go Industries' products. For additional installation assistance, please call Technical Support (800) 527-4345 or (972) 783-7444